


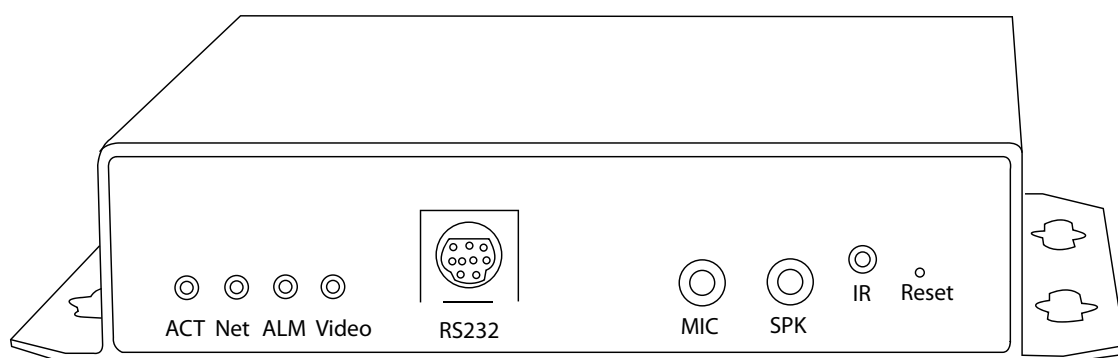

USER MANUAL

Indice

1	Accessories	4
2	General Introduction	5
2.1	Overview	5
2.2	Features	5
2.3	Specifications	6
3	Framework	12
3.1	Front panel	12
3.2	Rear panel 1ch NVS	13
3.3	Rear panel 4ch NVS	14
4	Quick Configuration Tool	15
4.1	First Connection	15
5	Connecting to a Device and Opening the Web Application	23
5.1	PC Configuration	23
5.2	Connection with the Search Tool	24
5.3	Connection with Internet Explorer	25
5.4	Login	25
6	Main Interface Introduction	27
6.1	Log in	27
6.2	Monitor Channel Menu Tree	28
6.3	System Menu	29
6.4	Monitor Window Switch	30
6.5	Preview Window Switch	30
6.6	PTZ Control	30
6.7	Color and More Setup	31
7	Configure	32
7.1	System Information	32
7.2	System Configuration	34
7.3	Advanced	50
7.4	Additional Function	56

8 Search	59
9 Alarm	61
10 About	62
11 Log out	63
Annex 1: No-IP DDNS	64
Annex 2: Using Google Chrome	70
Annex 3: Using Firefox	72
Annex 4: Using IE8	74
Annex 5: Email Function	77
Annex 6: Routers configuration	80

1 Accessories

Name	Qty
Network video server	1
12V power adapter	1
Multiple function connector cable data to DB9 male com cable	1
Quick Start Guide	1
CD	1

2 General Introduction

2.1 Overview

This device adopts audio video data collection, transmission and storage. It can connect to the network directly without any auxiliary device.

This device uses standard H.264 video compression technology which maximally guarantees the video quality.

It can be used alone or used in a network area. When it is used lonely, it can be connected to the network and used from a network client-end.

2.2 Features

User Management	Different user rights for each group, one user belongs to one group. The user right shall not exceed the group right.
Data Transmission	Support cable network data transmission via Ethernet.
Storage Function	Support central server backup function in accordance with configuration and setup in alarm or schedule setting. Support record via Web and the recorded file are stored in the client-end PC. Support local SD card hot swap.
Alarm Function	Real-time respond to local alarm input and video detection as user pre-defined activation setup and exert audio prompt(allow user to pre-record audio file). Realize real-time video detect such as motion detect, camera masking and video loss.
Network Monitor	Supports one-channel audio/video data transmit to network terminal Max supports 10 connections. Adopt the following audio and video transmission protocol: HTTP, TCP, UDP, MULTI-CAST, RTP/RTCP and etc. Support web access, widely used in WAN.
Network Management	Configuration and management via Ethernet. Support device management via web. Support various network protocols.
Peripheral Equipment	Support peripheral equipment connection via the RS232 port. Support serial port (RS232/RS485) transparent data transmission.
Power	External power adapter. Support DC 12V.

2.3 Specifications

2.3.1 Function specification

Parameter		Model	Ref. 4 306 24	Ref. 4 306 25
Audio video	Video input		1-ch analog video input. BNC port. Level: 1.0Vp-p. Resistance: 75Ω	4-ch analog video input. BNC port. Level: 1.0Vp-p. Resistance: 75Ω
	Video output		1-channel analog video output. BNC port. Level: 1.0Vp-p. Resistance: 75Ω Support composite video output (with OSD output).	
	Resolution		D1/CIF/QCIF/QVGA	
	Audio input		1-ch audio input. BNC port. Level: 1.0Vp-p. Resistance: 75Ω	4-ch audio input. BNC port. Level: 1.0Vp-p. Resistance: 75Ω
	Audio output		1-channel bidirectional talk output 3.5mm JACK LINE OUT.	
Performances	Standard		PAL: 1f/s ~ 25f/s	
	Encode Capability		H.264 encode	
	Encode Bit Stream		D1 (704 * 576) HD1 (352 * 576) CIF (352 * 288) QCIF (176 * 144)	
	Video Recording Speed		D1: 1f/s-25f/s for each channel (Adjustable)	D1: 1f/s-25f/s for each channel (Adjustable). CIF: 1f/s-25f/s for each channel (Adjustable)
Network Capacity			Max support 10 network users to monitor simultaneously	
Power Consumption			< 5W	
Power			DC 12V	
Temperature			- 10°C ~ + 50°C	
Working Environment Humidity			10% ~ 90%	
Dimension (H * W * D)			137 mm * 162 mm * 30 mm	

Specifications		Note
Video	Resolution	D1/HD1/CIF/QCIF/QVGA
	Video compression	Standard H.264 encode/decode format
	Motion Detection	Take 18 * 22 pix as a macro unit Support 396 detection zones Sensitivity level ranges from 1 to 6
	Dual-stream	1-channel real-time D1 + 1-channel CIF
Audio	Bidirectional Talk	Bidirectional talk. Delay within 200ms
	Audio Listening	Audio listening. 1-ch MIC input
Network		WEB access via IE browser
		PPPoE dial function
		DHCP auto get IP address
		DDNS
		SMTP email function
		NTP time synchronization
		DNS domain parse
		IP address filter

Specifications		Note
Record	Schedule Record	Support max 6 periods (This series product does not support this function.)
	Manual Record	After enabling manual record, no matter system is in schedule or alarm status or not, system just begins recording
	Alarm Record	System automatically enables recording function when alarm occurred
	Motion Detection Record	When video changes, system automatically enables record operation
OSD	Time Title Display	There are 255 layers - is the bottom layer and 255 is the highest layer - means completely transparent and 255 is opaque
	Channel Title Display	Please refer to the above information
	Privacy Mask	Max supports 8 zones
Storage	Local Micro SD storage	Support high-speed card/low-speed card
	Based on SDK network storage	Supported
Alarm	Network alarm/local alarm output	2-ch local/network alarm output
	Local alarm/network alarm input	4-ch local/network alarm input
Event Management	Activate alarm via motion detection or external input	Please enable pre-record function when activating the alarm
	Upload image email.	Upload automatically
	Send out alarm notice via email, HTTP and external port.	Support de-jitter when alarm occurs frequently
	Support video short time buffer storage before or after alarm	Pre-record is 2Mbytes. Buffer storage video of 5s
Control	RS485 PTZ control	Support various protocols
On-line Upgrade	Network remote upgrade	Use upgrade tool
Device Management	Network client-end Log in the client-end software in the PC to monitor IPC	
Parameter Configuration	NVS provides device information, video information, COM setup, record setup, motion detection setup, alarm setup, OSD information interfaces to modify system setup	
	NVS provides running information such as user port, log, status, user management, email setup, date modification	
Log	System can record the important event log record Record the following information: System operation, setup operation, alarm event, record management, user management, clear log	
Water Mark	To avoid vicious video modification	
Power supply	DC12V power supply	
RESET	Support hardware reset. System needs to reboot to activate the default setup	

2.3.3 Factory Default Setup

Please refer to the following sheet for factory default setup information.

Function configuration type		Item Name		Default setup
General Setup		Date format		Y-M-D
		DST		Disable by default
		Date separator		' _ '
		Time format		24H
		Language		English
		When HDD is full		Overwrite
		Record duration		60 min
		Device No.		8
		Video type		PAL
Encode Setup	Main stream	Channel		Channel 01
		Compression		H.264 Enable audio and video
		General bit stream		Main stream
		Resolution		D1
		Frame rate		25
		Bit stream control		CBR
		Bit stream value		2048
		I frame interval control		50
	Extra stream	Extension stream		Main stream
		Audio/Video enable		Enable video
		Resolution		CIF
		Frame rate		25
		Bit stream control		VBR
		Quality		High
		Bit stream value		512
		I frame interval control		50
		Image color		Brightness: 50 Contrast: 50 Saturation: 50 Hue: 50
		Watermark		Enable Stream type: all Type: Character Character: Digital CCTV
		Privacy Mask		Never
		Time title		Enable. OSD transparent: 128
		Channel title		Enable. OSD transparent: 128
Schedule setup		Channel		Channel 01
		Pre-record		5 seconds
		Time Setup	Start time	0:00:00
			End-time	23:59:59
			Record	Period 1 : Enable motion detection/alarm

Function configuration type	Item Name		Default setup
Schedule setup	Time Setup	Snapshot	Period 1 : Enable motion detection/alarm
		Week	Sunday
RS232 Setup	Option		COM01
	Function		Console
	Data bit		8
	Stop bit		1
	Baud rate		115200
	Parity		None
Network setup	Ethernet		Port 01
	DHCP		Disable
	IP address		192.168.1.108
	Subnet mask		255.255.0.0
	Gateway		192.168.0.1
	Device name		Device factory default name
	TCP port		37777
	HTTP port		80
	UDP port		37778
	Max connection		10
	Network transmission QoS		Disable
	Remote host		Multiple broadcast group
	IP address		239.255.42.42
	Port		36666
	Email setup		Disable
	Multiple DDNs		Disable
	NAS setup		Disable
	NTP setup		Disable
	IP Filter		Disable
Alarm setup	Event type		Local input
	Alarm input		Input 01, disable
	Type		Normal open
	Setup		Period: Start time 0:00:00 End time: 23:59:59 Period 1:enable Week: Sunday
	Anti-dither		0 second
	General output		Disable
	Alarm latch		10 seconds
	Record channel		1, enable
	Record latch		10 seconds
	Send email		Enable
	PTZ activation		Disable Event type: never Address: 0
	Snapshot		Disable

Function configuration type	Item Name		Default setup
Video detection	Event type		Motion detection
	Channel		Ch01, Disable
	Sensitivity		3
	Time period setup		Period: Start time 0:00:00 End time:23:59:59 Period 1:enable Week: Sunday
	Anti-dither		5 seconds
	Alarm output		Disable
	Alarm latch		10 seconds
	Record channel		Disable
	Record latch		10 seconds
	Send email		Disable
	PTZ activation		Event type: Never Address: 0 Disable
	Snapshot		Disable
PTZ Setup	Channel		Channel 01
	Protocol		DH-SD1
	Address		1
	Baud rate		9600
	Data bit		8
	Stop bit		1
	Parity		None
Default and Backup	All		Disable
	General		Disable
	Encode		Disable
	Schedule		Disable
	RS232		Disable
	Network		Disable
	Alarm		Disable
	Video detection		Disable
	Camera		Disable
	Maintain		Disable
	Channel No.		Disable
Advanced	Abnormity	Even Type	No disk, Disable
		Alarm Output	Disable
		Alarm Latch	10 seconds
		Send email	Disable
	User account		admin/admin (reusable) 888888/888888(reusable) 666666/666666(reusable) default
	Snapshot	Channel	Channel 01

Function configuration type	Item Name		Default setup
Advanced	Snapshot	Snapshot mode	Snapshot_Timing
		Frame rate	1f/s
		Resolution	D1
		Quality	60%
	Auto maintain	Auto reboot	2.00 each day
		Auto delete old files	Never
	SN		1
	IP		0.0.0.0
DNS Setup	Port		7000
	DNS		221.123.33.228
	Alternative DNS		221.12.1.228

3 Framework


3.1 Front panel



Refer to the following sheet for detailed information.

Indication light /Port	Function / Port	Color	Note
ACT	Power/working status indication light	Red / Green	When connected to power: Red When device is working normally: Green light is on. When device is upgrading: Green light is flashing.
NET	Wireless network status indication light	Green	Wireless connection ok: light is on Wireless network is abnormal: light is off
ALM	Alarm status indication light	Red	Device is armed: Light is on. There is data transmission: Light is flashing. Device is disarmed: Light is off.
Video	Transmission/record status indication light	Blue	Video transmission is normal: Light is on. Video transmission is abnormal: Light is off.
RS232	232 debug COM		For common COM debug, configure IP address to transmit transparent COM data.
MIC	MIC		Audio input port.
SPK	SPK		Audio output port.
IR	IR remote control port.		To receive the IR control signal from the remote controller.
Reset	RESET button		Device reset button. Press it for 5 s to restore factory default setup.


3.2 Rear Panel 1ch NVS

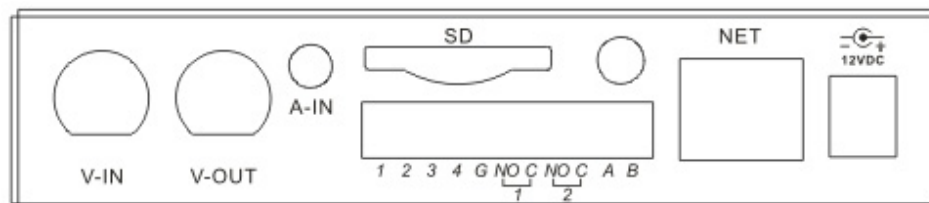

Refer to the following sheet for detailed information.

Port name		Connection	Function
V-IN	Video input port	BNC	Receive the signal from the front-end device such as camera or speed dome
V-OUT	Video output port	BNC	Output analog video signal. It can connect to the TV monitor to view video
A-IN	Audio input port		Input analog audio signal
SD	SD card port		Input SD card
1/2/3/4	1-4 channel alarm input port		Alarm input port to receive the relay signal from the external alarm device
G	Alarm input port ground end		Alarm commun port
NO/C-1 NO/C-2	2-ch alarm output		Alarm output port: Output alarm signal to the alarm device NO/C-1: NO alarm output 1 NO/C-2: NO alarm output 2
A, B	RS485 Port		RS485 port to connect to the control devices such as speed dome PTZ
Wireless port			Connect to the wireless antenna to receive WIFI,3G and et signal
NET	Network port		10M/100M self-adaptive Ethernet port Connect to the network cable
12VDC	Power port		Input 12V DC

3.3 Rear Panel 4ch NVS

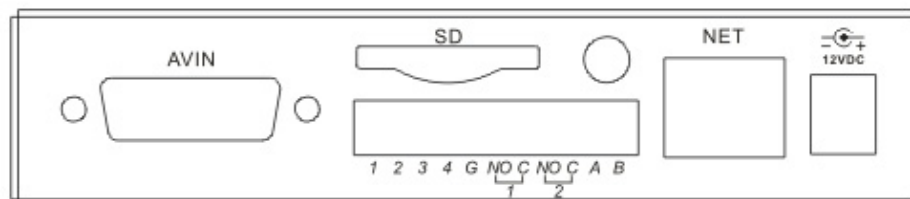

Refer to the following sheet for detailed information.

Port name		Connection	Function
AVIN	Video input port	BNC	4 video input ports to receive the signal from the front-end device such as camera or speed dome.
	Audio input port	BNC	4 audio input ports to receive the analog audio signal from the pickup or mike.
	Video output port	BNC	1 video output port to output analog video signal. It can connect to the TV monitor to view video.
SD	SD card port		Input SD card
1/2/3/4	1-4 channel alarm input port		Alarm input port to receive the relay signal from the external alarm device
G	Alarm input ground end		Alarm commun port
NO/C-1	2-ch alarm output		Alarm output port: Output alarm signal to the alarm device. NO/C-1: NO alarm output 1 NO/C-2: NO alarm output 2
NO/C-2			
A B			RS485 port to connect to the control device such as speed dome PTZ.
NET	Network port		10M/100M self-adaptive Ethernet port. Connect to the network cable.
12VDC	Power port		Input 12V DC power.

4 Quick Configuration Tool

The quick configuration tool allows you to search for a device's IP address, even if it is in another segment (cameras, DVR, NVR, encoders and decoders) and to modify it. The configuration tool is available on the CD supplied with the product. It also allows the software to be upgraded or certain parameters to be modified.

This tool is used to connect to devices with an IP address in the same segment only.


4.1. First Connection

4.1.1 Connection with the configuration tool (to change the IP address or upgrade a device's internal software)

To open the software, double click the "ConfigTool.exe" icon on the CD supplied with the product.

To search for devices connected to the network:


- Click the "Refresh" button; the tool will search for devices connected to the network and display it in the form of a list.

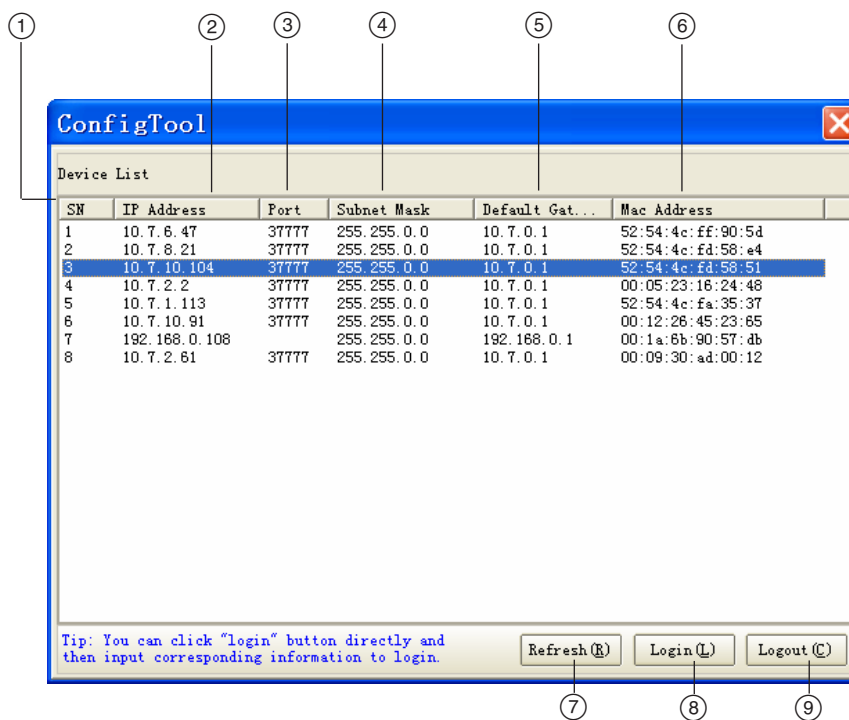


	Description
①	Number
②	Device IP address
③	Device TCP port
④	Device subnet mask
⑤	Device default gateway
⑥	Device MAC address
⑦	Refresh the list
⑧	Access to the camera's network configuration menu
⑨	Disconnection from the camera's network configuration menu

To connect to a device and open the web application:

- Highlight it (single click in the list).
- Right click the highlighted line.

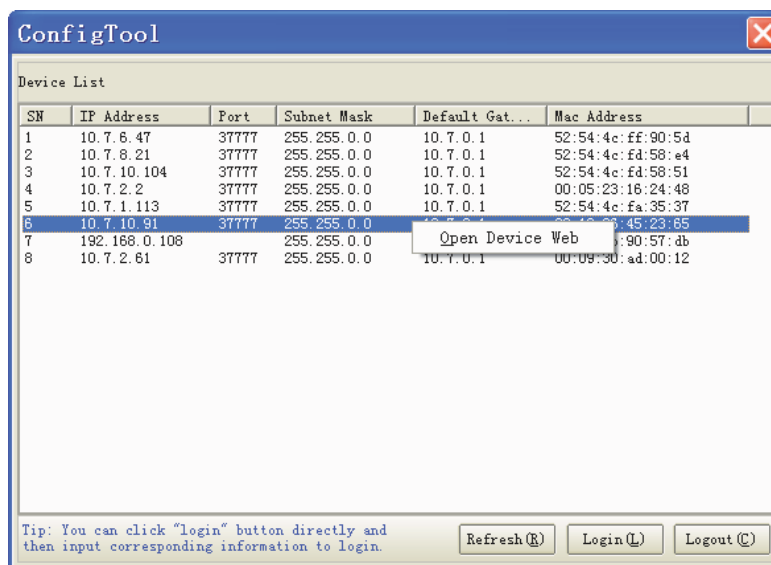

- Click on "Open Device Web".
- The following web page opens:

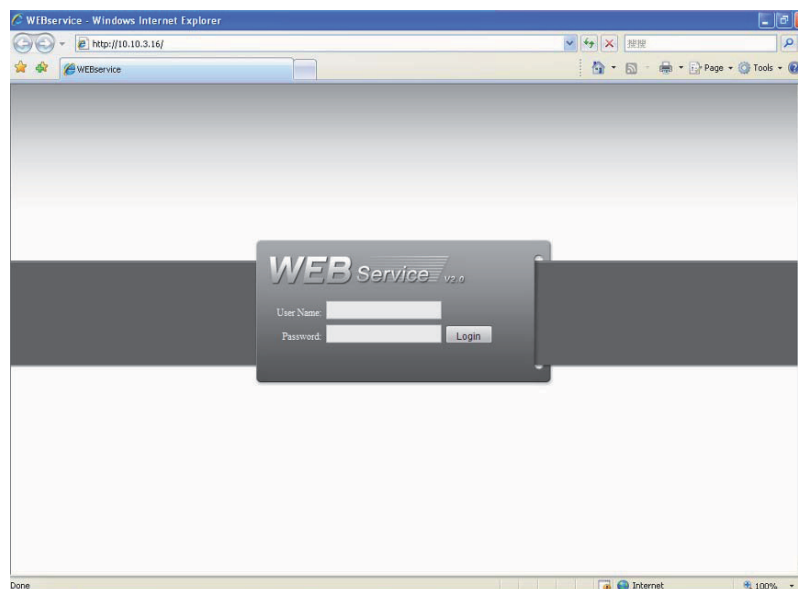

If the connection fails:

- either the camera does not have an IP address in the same segment as the PC (see chapter 4.1.2 to change it),
- or the Internet Explorer security parameters are not set correctly (see chapter 5 to change them).


4.1.2 Connection with the configuration tool (to change the IP address or upgrade a device's internal software)

To search for devices connected to the network:

- Click the «Refresh» button; the tool will search for devices connected to the network and display them in the form of a list (see chapter 4.1.1 for details of the interface).

To connect to a device:


- Highlight it (single click in the list).
- Click on button ⑧ (or double click on the highlighted line).
- The following window opens:

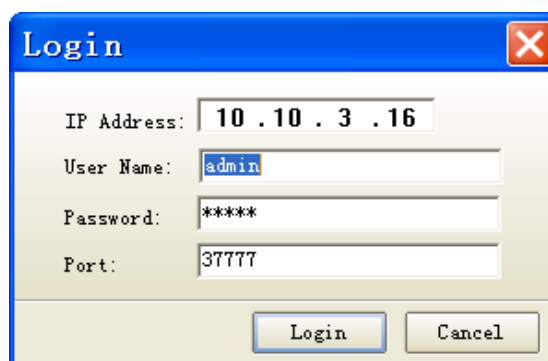A Windows-style dialog box titled "Login" with a blue title bar and a red close button. It contains four input fields: "IP Address:" with the value "10 . 10 . 3 . 16", "User Name:" with the value "admin", "Password:" with the value "*****", and "Port:" with the value "37777". At the bottom right are two buttons: "Login" and "Cancel".

Function	Note
IP address	Device IP address
User name	Device user name
Password	Device password
Port	Device TCP port
Login	Connection
Cancel	Cancel


Click "Login" once the information has been entered.

If the following screen appears, this means that the device address is not in the same IP addresses segment as the PC on which the configuration tool is currently running. It will therefore not be possible to connect.

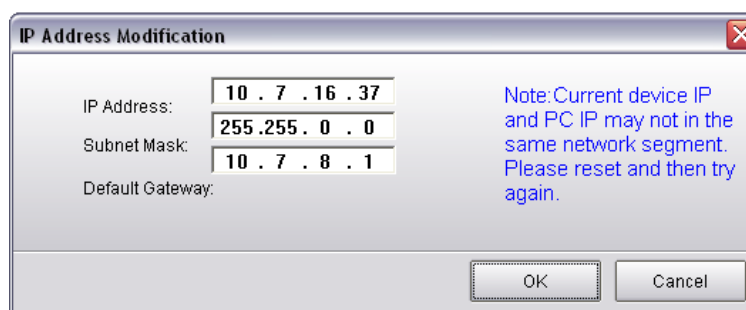A Windows-style dialog box titled "IP Address Modification" with a grey title bar and a red close button. It contains three input fields: "IP Address:" with the value "10 . 7 . 16 . 37", "Subnet Mask:" with the value "255 . 255 . 0 . 0", and "Default Gateway:" with the value "10 . 7 . 8 . 1". To the right of these fields is a blue note: "Note: Current device IP and PC IP may not in the same network segment. Please reset and then try again." At the bottom right are two buttons: "OK" and "Cancel".


- Manually modify the IP address by entering the desired new address.
- Click OK to save the new address in the device.

- Restart the procedure. The following window should open:

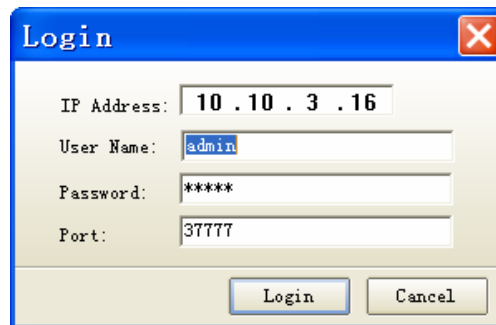

A login dialog box titled "Login" with a blue header bar and a red close button. It contains four input fields: "IP Address" with the value "10 . 10 . 3 . 16", "User Name" with the value "admin", "Password" with the value "*****", and "Port" with the value "37777". At the bottom, there are two buttons: "Login" and "Cancel".

- Click Login to access the parameter modifications.

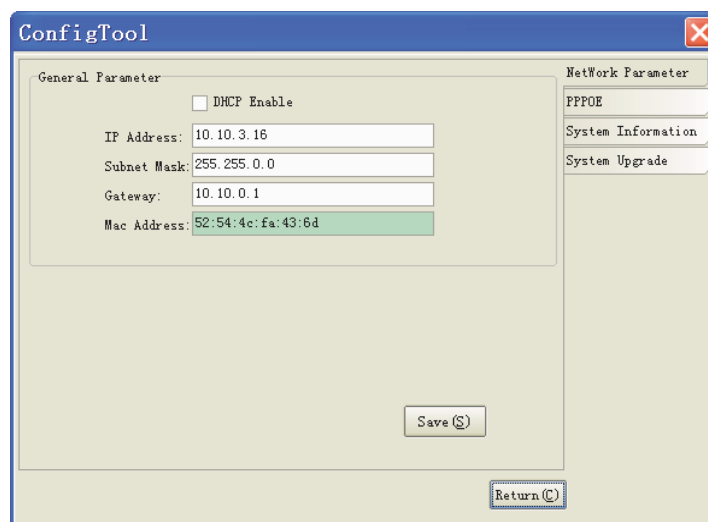

A configuration window titled "ConfigTool" with a blue header bar and a red close button. It has two tabs: "General Parameter" and "Network Parameter". The "General Parameter" tab is active, showing fields for "IP Address" (10.10.3.16), "Subnet Mask" (255.255.0.0), "Gateway" (10.10.0.1), and "Mac Address" (52:54:4c:fa:43:6d). There is a checkbox for "DHCP Enable" which is unchecked. At the bottom, there are two buttons: "Save (S)" and "Return (C)".

Function	Note
Enable DHCP	Enable or disable the DHCP function
IP address	Device IP address
Subnet mask	Device subnet mask
Gateway	Device default gateway
MAC address	Device MAC address
Save	Save
Return	Return to the search interface

4.1.3 PPPoE

Select "PPPoE" on the right-hand side of the interface:

The screenshot shows a window titled "ConfigTool" with a close button in the top right corner. The main area is divided into two sections. The left section is titled "PPPoE" and contains a checkbox labeled "PPPoE Enable" which is checked. Below this are three input fields: "User Name:", "Password:", and "IP Address:". The "IP Address" field is highlighted in green. The right section is a sidebar with four tabs: "Network Parameter", "PPPoE", "System Information", and "System Upgrade". The "PPPoE" tab is currently selected. At the bottom of the window are two buttons: "Save (S)" and "Return (C)".

Function	Note
Enable PPPOE	Enable or disable the PPPoE function
User name	PPPOE user name
Password	PPPOE password
IP address	Device IP address in the WAN
Save	Save
Return	Return to the search interface

- Click the "System Information" tab on the right.

4.1.4 System

Select "System Information" on the right-hand side of the interface.


The screenshot shows the 'ConfigTool' window. On the left, the 'Device Information' section contains fields for SN (PA142660904A340012), Software Version (Software Version: 1.0, Build:2009-2-1), and Device Name (PA142660-340012). Below this is the 'Date and Time' section with two radio buttons: 'Synchronization with PC' (selected) and 'Manual Setup'. The 'Synchronization with PC' section includes fields for PC Date (2009- 7- 9), PC Time (15:13:36), Date (2009- 7- 9), and Time (14:18:23), along with a 'Sync (\$)' button. The 'Manual Setup' section is currently inactive. At the bottom of the main window are 'Save (\$)' and 'Return (C)' buttons. On the right, a sidebar contains tabs for 'NetWork Parameter', 'PPPOE', 'System Information' (selected), and 'System Upgrade'.

Function	Note
SN	Device serial number
Software version	Device software version
Device name	Model name
Synchronization with PC	Synchronisation of the device date and time with the date and time on the PC. Click "Sync" to synchronise, then "Save" to save the date and time.
PC date	PC date
PC time	PC time
Manual Setup	Manual setup of the device date and time. Enter the desired date and time. Click "Sync" to synchronise, then "Save" to save the date and time.
Date	Date
Time	Time
Sync	Synchronise
Save	Save
Return	Return to the search interface

- By way of example, enter a camera name in the "Device Name" field.
- Check that "Synchronization with PC" is selected, so that the date and time are synchronised with the PC.
- Check that the date and time are correct. If not, click "Sync(\$)".

4.1.5 System Upgrade


Select "System Upgrade" on the right-hand side of the interface.

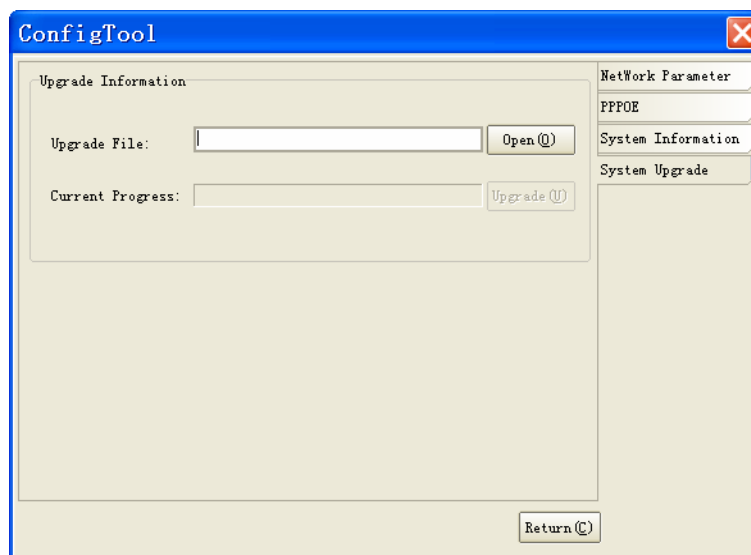


Function	Note
Upgrade file/Open	Click here to select the upgrade file.
Current progress/Upgrade	Click here to start the upgrade procedure.
Return	Return to search interface

Steps for updating the device's internal software


- Click on the "Open" button and select the *.bin internal software file.
- When the file has been added, click the "Upgrade" button; the file is then transmitted to the device.

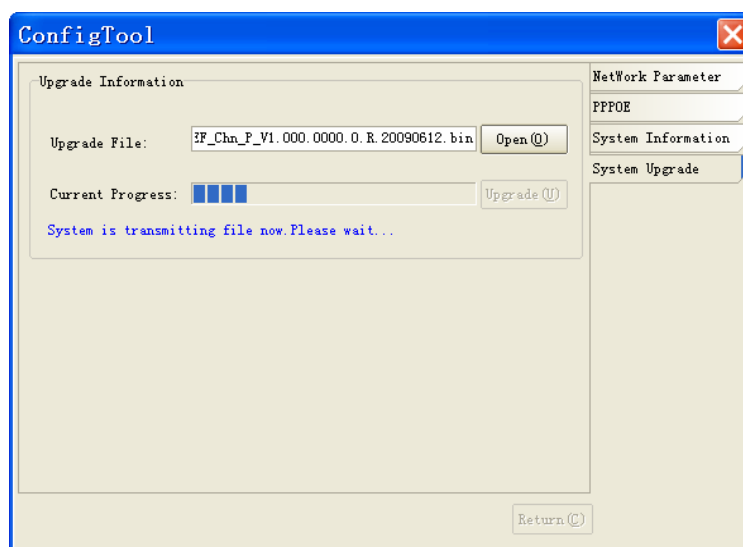

- Once the file has been transferred, the device upgrades automatically.

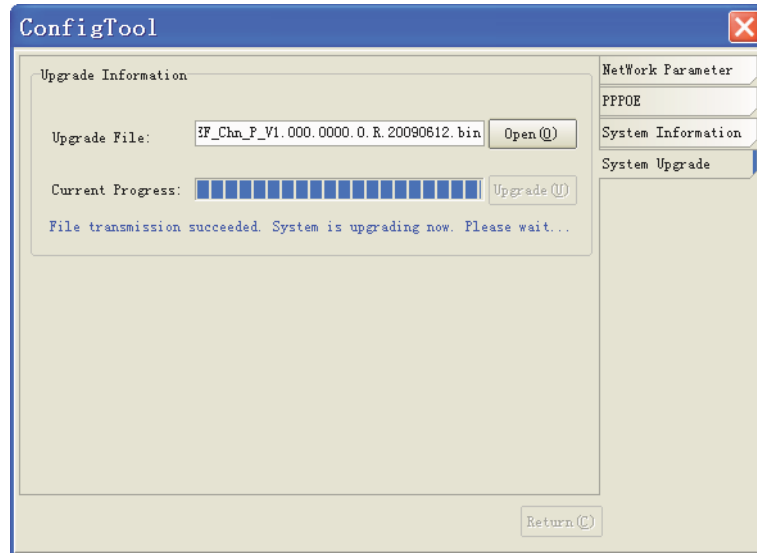

- Once the device has been upgraded, the following dialogue box opens:

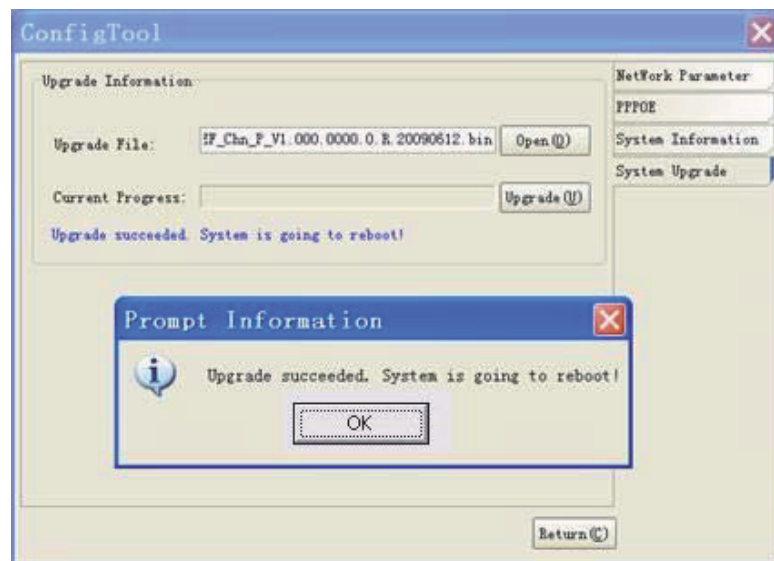

- Click OK to finish the procedure.

5 Connecting to a Device and Opening the Web Application

5.1 PC Configuration


This device supports Web access and management via PC.

Web includes several modules including monitor channel list, record search, alarm setup, system configuration, PTZ control, monitor window, etc.

The system pops up warning information to ask whether you wish to install the control webrec.cab or not. Click OK; the system can automatically install the control.

When the system is upgrading, it can overwrite the previous Web application too.

If you cannot download the ActiveX file, check whether you have installed the plug-in to disable the control download. Alternatively you can lower the IE security level.

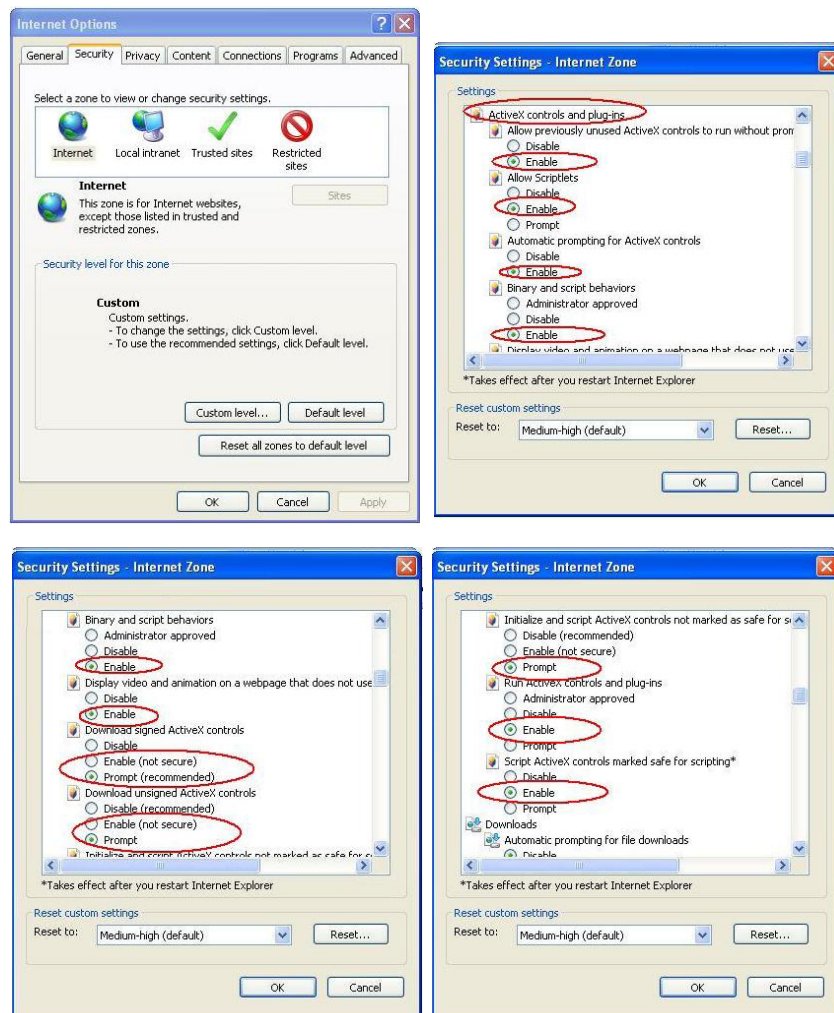


5.2 Connection with the Search Tool


To open the software, double click the "ConfigTool.exe" icon on the CD supplied with the product.

To search for devices connected to the network:

- Click the "Refresh" button; the tool will search for devices connected to the network and display them in the form of a list.
- Highlight the device required (single click in the list).
- Right click the highlighted line.

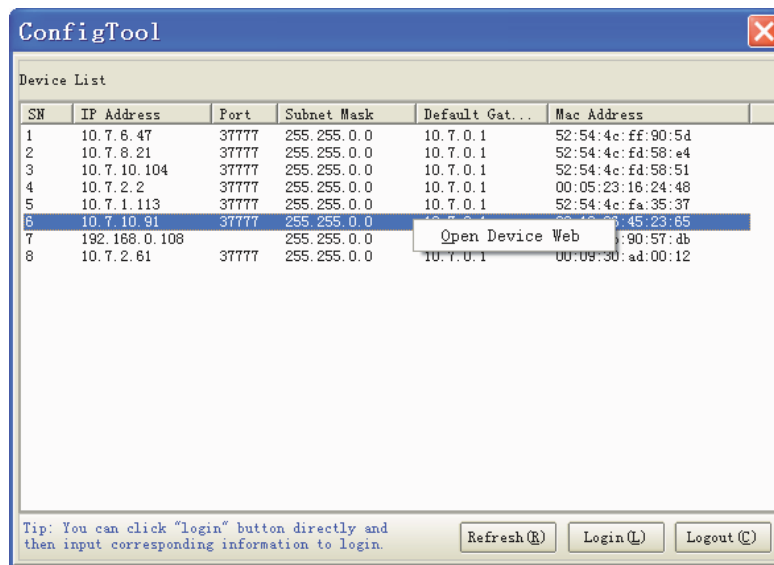

- Click on "Open Device Web".
- The following web page opens:

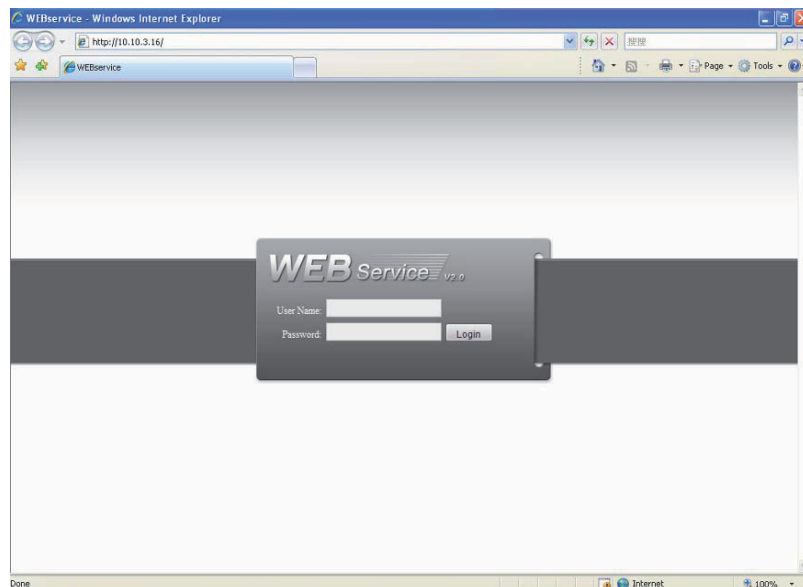


5.3 Connection with Internet Explorer

IP camera factory default setup:

- IP address: 192.168.1.108.
- User name: admin
- Password: admin

Open Internet Explorer (IE) and enter your camera IP address in the address bar.
For example, if your camera IP is 192.168.1.108, then enter http://192.168.1.108 in the IE address bar.

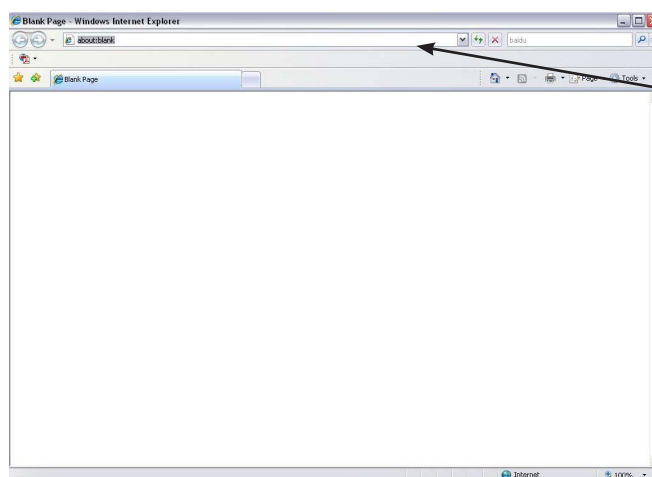

Input your IP
address here


Note:

If the connection fails:


- either the camera does not have an IP address in the same segment as the PC (see chapter 4.1.1 to change it),
- or the Internet Explorer security parameters are not set correctly (see chapter 5.1 to change them).

5.4 Login

- Enter your user name and password.
(Default factory name is admin and password is admin.)
The login type includes: TCP/UDP/Multicast (depending on the device).

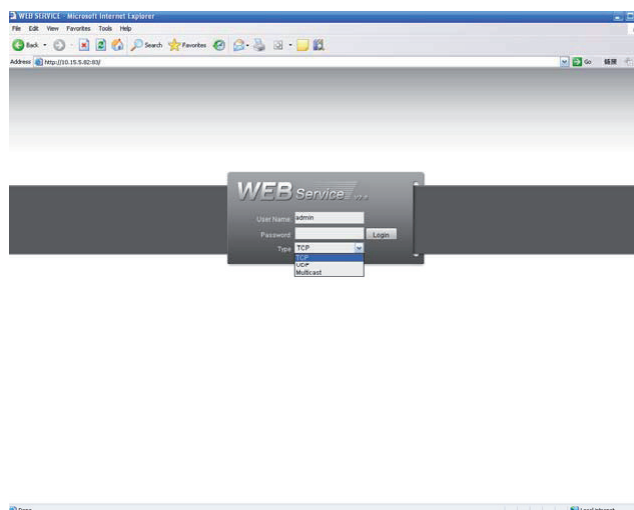

After you log in, the main window appears:

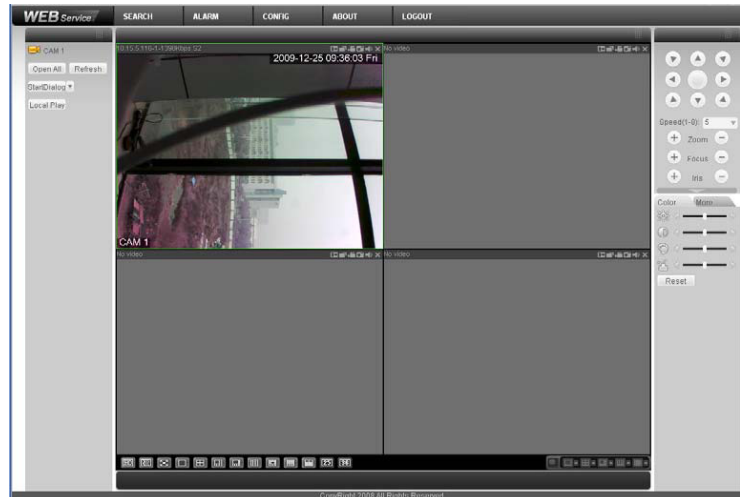


Note: Use IE compatibility mode if you are using IE8 or above.

See the detailed user guide for the Web interface.


6 Main Interface Introduction

6.1 Log in

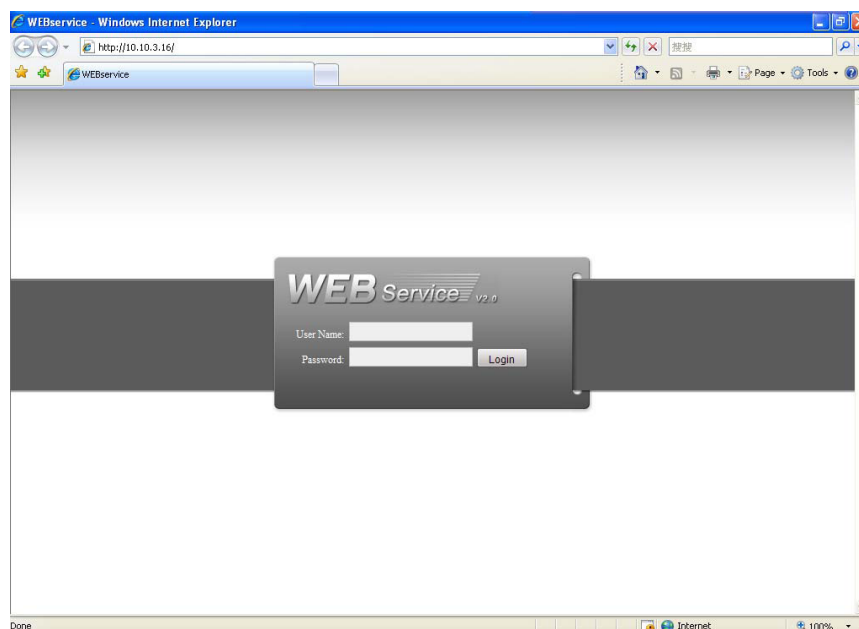

Input user name and password (default is admin/admin).

After you logged in, IP Camera web main interface appears:

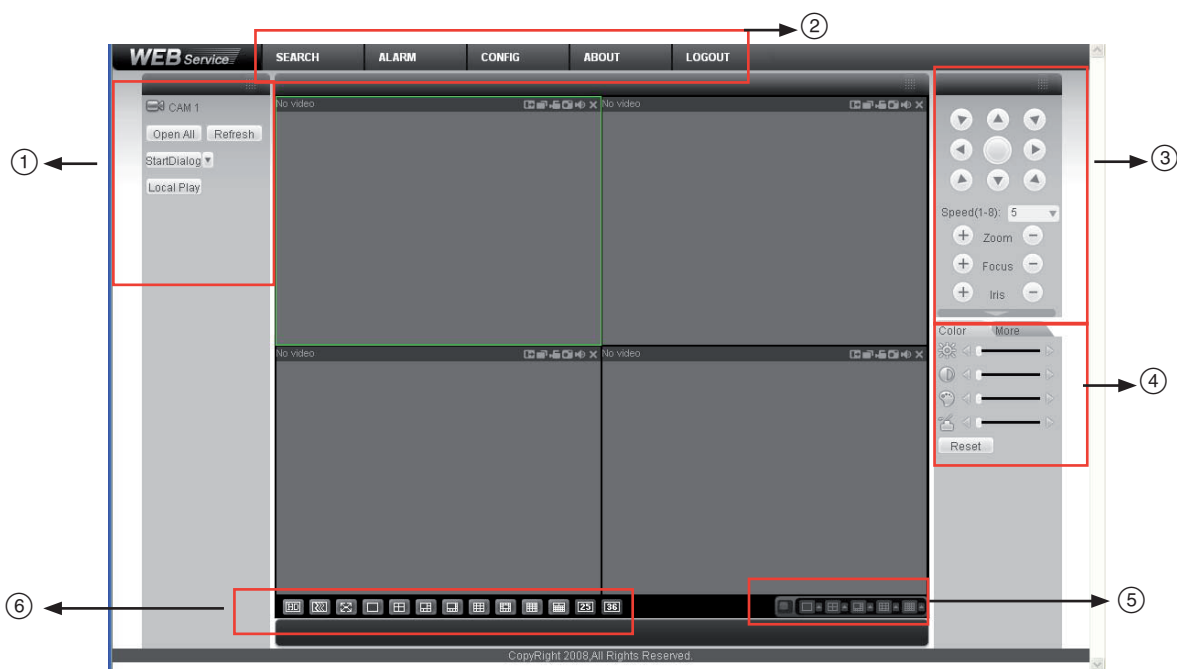

There are six sections:

- Section 1: Monitor channel menu tree.
- Section 2: System menu.
- Section 3: PTZ control.
- Section 4: Video setup and other setup.
- Section 5: Preview window.
- Section 6: Monitor window switch.

6.2 Monitor Channel Menu Tree

The monitor channel menu tree is shown below.




Refer to the following sheet for detailed information.

Parameter	Function
CAM 1	Monitor channel 1 IP Camera supports main stream and extra stream. - Main stream: In normal network width environment, main stream can record video and audio and realize network monitor. - Extra stream: If network width is not sufficient, you can use extra stream to realize network monitor. Note the extra stream resolution shall be less than main stream resolution.
Open all /Close all	Click this button to open all video channels. Once all video channels are open, this button becomes "Close all".
Start dialog	Click this button to enable audio talk. Audio compression type: G.711a (default), PCM, etc.
Local play	Click this button to select recorded file into the local PC to play it in the web interface.
Refresh	Click this button to refresh monitor channel name.

6.2.1 Live Monitoring

Left click on camera name to view real-time video, the monitor is show below.

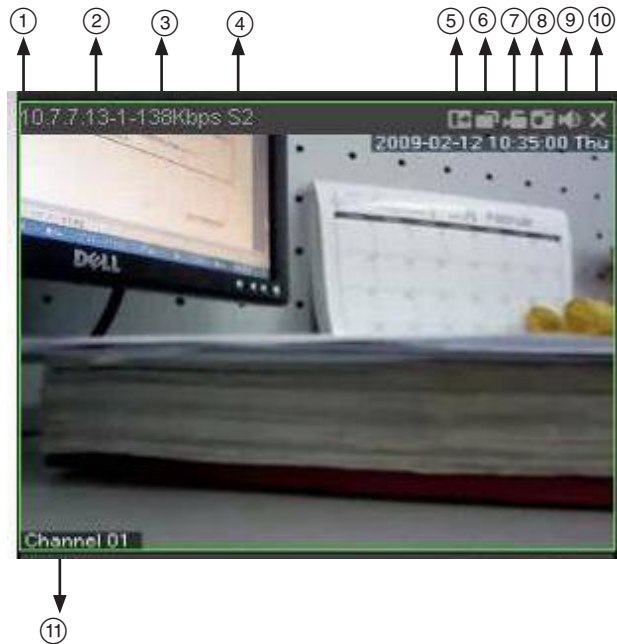

Refer to the following sheet for monitor window parameter information.

SN	Parameter	Function
1-4	Display device information	- 1: Device IP address. - 2: Channel number. - 3: Bit stream. - 4: Stream decode type. - S1: Overlay. - S2: Off stream. - S3:GD1 - H1: Overlay - H2: off stream decoding from the display card.
5	Digital zoom	Click this button and then left drag the mouse in the zone to zoom in. Right click mouse system restores original status.
6	Change show mode	Resize or switch to full screen mode.
7	Local record	Click this button to begin local recording. The recorded file is saved by default to folder: C:\RecordDownload.
8	Capture picture	Click this button to snapshot. Images are memorized in folder: C:\ Picture download (default).
9	Audio	Turn on or off audio.
10	Close video	Close video in current window.
11	Channel number	Current view channel number.

6.2.2 Playback

Click local play to open recorder. The playback bar is shown below:



- 1- Playback process control
- 2- Play
- 3- Pause
- 4- Stop
- 5- Slow play
- 6- Fast play

Once you selected window is in real-time monitor mode, system automatically switches to playback the video by default.

6.3 System Menu

SEARCH	ALARM	CONFIG	ABOUT	LOGOUT
--------	-------	--------	-------	--------

For detailed information refer to:

- Chapter 7 : Configuration,
- Chapter 8 : Search,
- Chapter 9 : Alarm,
- Chapter 10: About,
- Chapter 11 : Log out.

6.4 Monitor Window Switch



The device support only 1-window and full-screen display mode.



Video quality adjustment button.



Displays the original image size in the webpage.


6.5 Preview Window Switch

The device do not support this function.

6.6 PTZ Control

PTZ interface is shown below


Before operations make sure you have set the speed dome address. The DVR and the speed dome connection are OK.

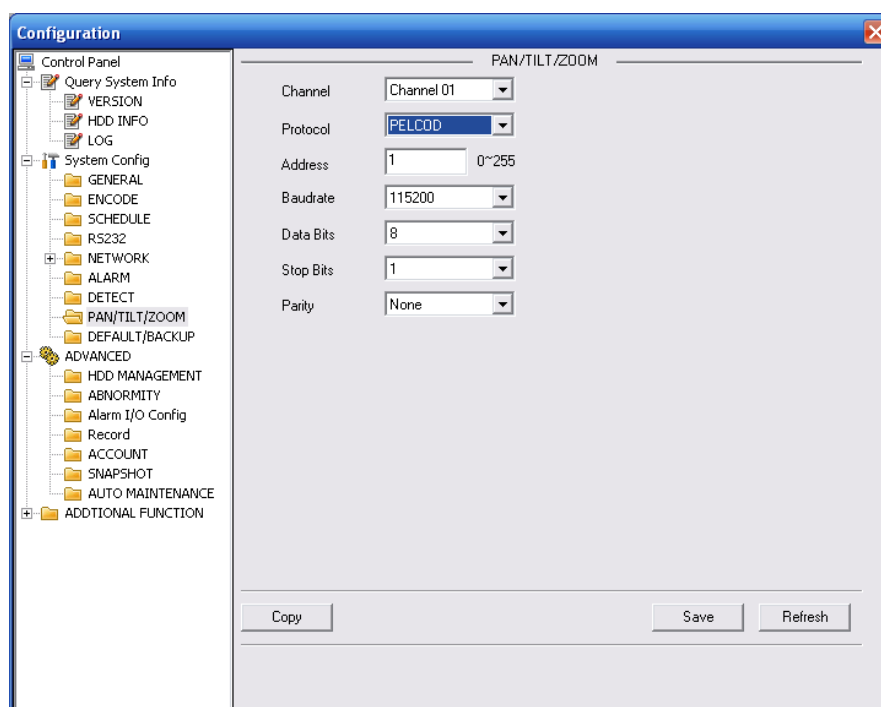

Parameter	Function
Channel	You can select monitor channel from the dropdown list.
Protocol	Select the corresponding dome protocol (such as PELCOD).
Address	Set corresponding dome address. Default value is 1. Please Note your setup here shall comply with your dome address; otherwise you can not control the speed dome.
Baud Rate	Select the dome baud rate. Default setup is 9600.
Data Bit	Default setup is 8. Please set according to the speed dome dial switch setup.
Stop bit	Default setup is 1. Please set according to the speed dome dial switch setup.
Parity	Default setup is none. Please set according to the speed dome dial switch setup.
Save	You can click save button after you complete setup for one channel, or you can complete the whole setups and then click save button.
Refresh	Click this button to get device latest configuration information.

6.7 Color and More Setup


Color setup

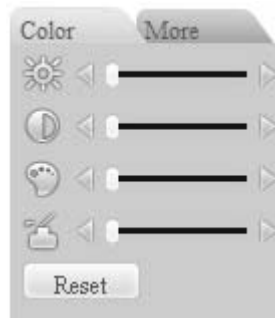

Refer to the following sheet for detailed information.

Parameter		Function	
Video setup		Adjust monitor video brightness.	All the operations here apply to web display only. Go to chapter 7.2.2 System configuration->Encode setup->color setting to adjust corresponding system items.
		Adjust monitor video contrast ness.	
		Adjust monitor video saturation.	
		Adjust monitor video hue.	

More Setup

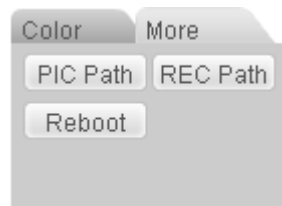

Refer to the following sheet for detailed information.

Parameter		Function
More	Picture Path	System pops up an interface to modify path.
	Record Path	System pops up an interface to modify path.
	Reboot	System pops up a dialogue box, click OK button to reboot device.

7 Configure


See chapter 6.3 to see how to access to the configuration menu».



7.1 System Information


7.1.1 Version Information

View device hardware feature and software version information.

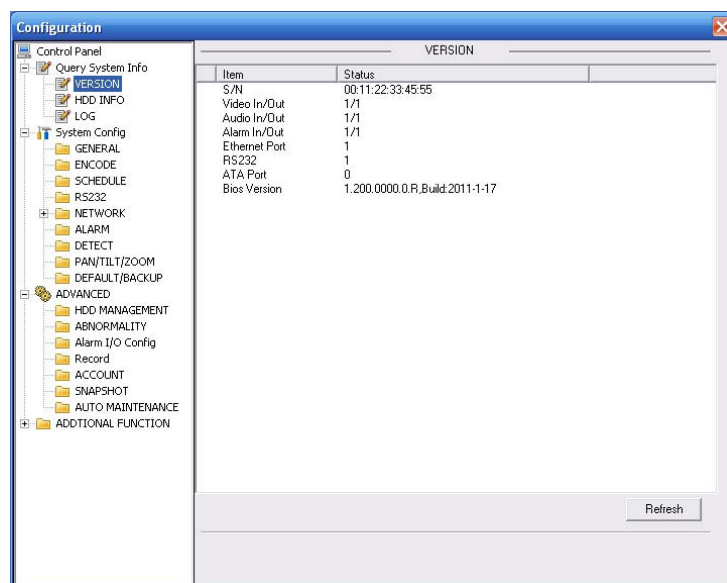


7.1.2 HDD information

View local storage status and network status including free capacity and total capacity.

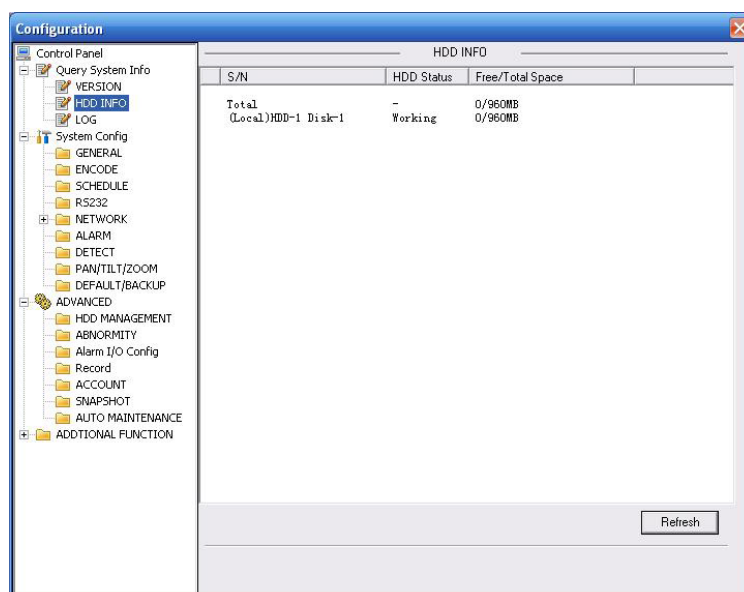

7.1.3 Log


View system log.

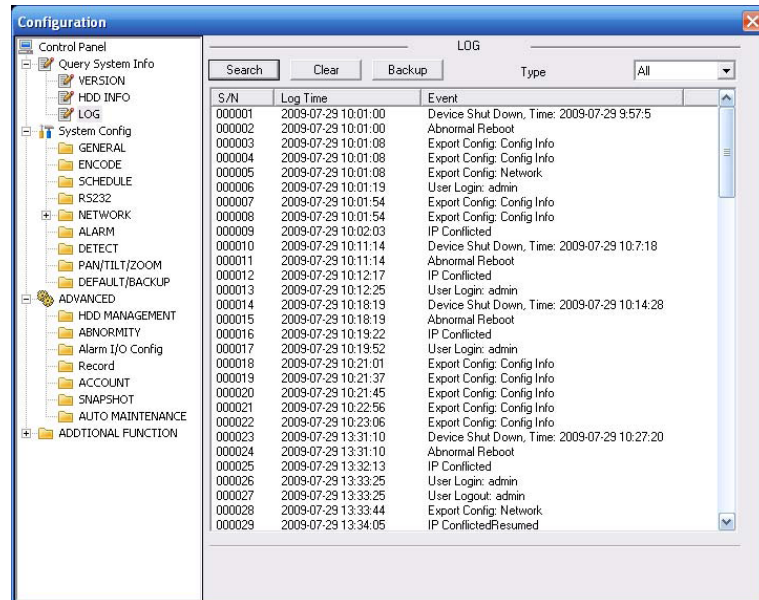

Refer to the following sheet for log parameter information.

Parameter	Function
Type	Log types include: system operation, configuration operation, data management, alarm event, record operation, user management, log clear and file operation.
Search	Select log type from the drop down list and then click search button to view the list.
Clear	Click this button to delete all displayed log files. System does not support clear by type.
Backup	Click this button to backup log files.

To export logs, click backup button, the following interface appears:



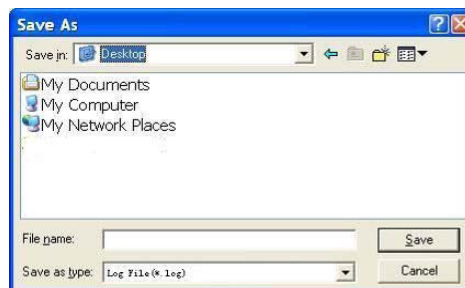


7.2 System Configuration

Please click save button to save your setup before exiting each section.

7.2.1 General Setup



Set system time, record length, video format, etc.

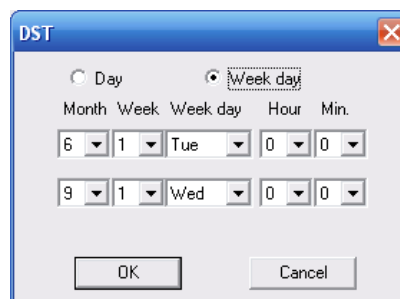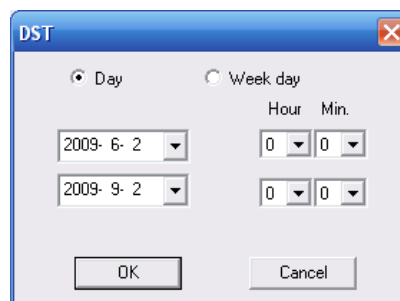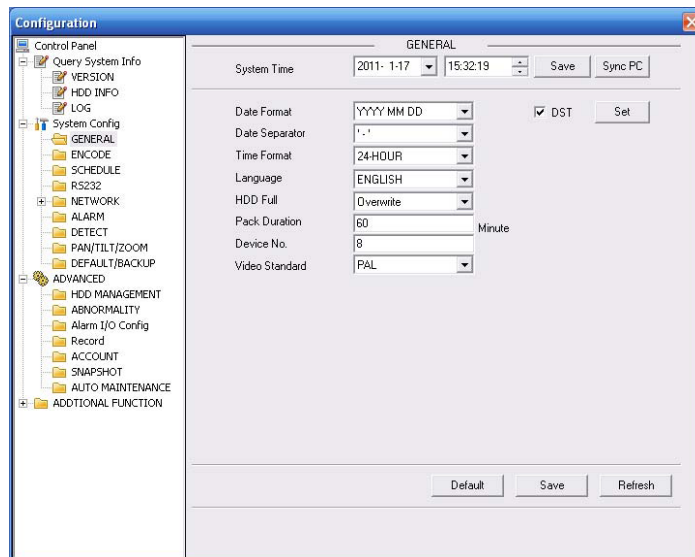

Refer to the following sheet for detailed information.

Parameter	Function
System Time	Modify system time. Click "Save" button after your completed modification
Sync PC	Click this button to save the system time as your PC current time
Data Format	Select data format from the dropdown list.
Data Separator	Select separator such as – or /.
Time Format	Two options: 24-H and 12-H.
DST	Set day night save time begin time and end time.
Language	Select the language from the dropdown list. Device needs to reboot to get the modification activated.
HDD Full	Two options: stop recording or overwrite the previous files when HDD is full.
Pack Duration	Select recorded file size.
Device No	When you are using one remote control to manage multiple devices, you can give a serial numbers to the devices. This device does not support this function.
Video Standard	Display video standard such as PAL.


7.2.2 Encode

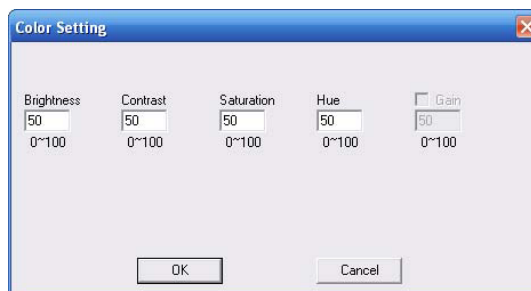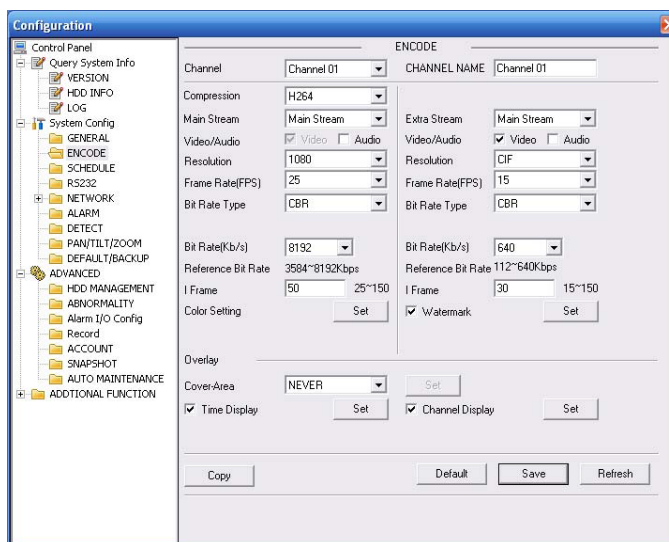

Refer to the following sheet for detailed information.




Parameter	Function
Channel	Select a monitor channel.
Channel Name	Display current channel name. You can modify it .
Compression	H.264
Main Stream	It includes general stream, motion stream and alarm stream. Select different encode frame rates form different recorded events. For example, use high frame rate to record important events, record scheduled event in lower frame rate and set different frame rates for motion detection record and alarm record.
Extra Stream	Select extra stream to enable the extension stream to monitor.
Audio/Video	Main stream: Recorded file only contains video by default. Check the audio box here to enable audio function. Extra stream: Recorded file only contains video by default. Check the audio box here to enable audio function.
Resolution	There are multiple resolutions. Select from the dropdown list. For each resolution, the recommended bit stream value is different.
Frame Rate	The frame rate may vary due to different resolutions. When the resolution type is 3M, 1-15f/s. For other resolutions 1-25f/s.
Bit Rate Type	There are two options: VBR and CBR.
Quality	The value ranges from 1 to 6. The level 6 is the best video quality. This setting is available only with VBR bit rate
Bit Rate	In CBR, the bit rate here is the max value. In dynamic video, system needs to low frame rate or video quality to guarantee the value. The value is null in VBR mode. Refer to recommend bit rate for the detailed information. .
Recommended Bit	Recommended bit rate value according to the resolution and frame rate set.
I Frame	Set the P frame amount between two I frames. The value ranges from 1 to 150. Default value is 50. Recommended value is frame rate *2.
Color Setting	Set video brightness, contrast, hue, saturation and gain. The value ranges from 0 to 100.
Watermark	Select watermark bit stream, watermark mode and watermark character. Default character is Digital CCTV.
Cover area (privacy mask)	Set privacy masks. System max supports 8 privacy mask zones.
Time Title	Enable this function to overlay time information in video window. OSD transparent value ranges from 0 to 255. 0 means complete transparent. Use the mouse to drag the time tile position.
Channel Title	You can enable this function to overlay channel information in video window. OSD transparent value ranges from 0 to 255. 0 means complete transparent. Use the mouse to drag the channel tile position.
Save	Click save button after complete setup for one item, or complete the whole setups and then click save button.
Refresh	Click this button to get device latest configuration information.

Click watermark button to open interface as below:

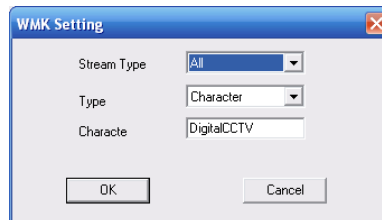

7.2.3 Schedule

Set differents periods for various days. There are max six periods in one day.

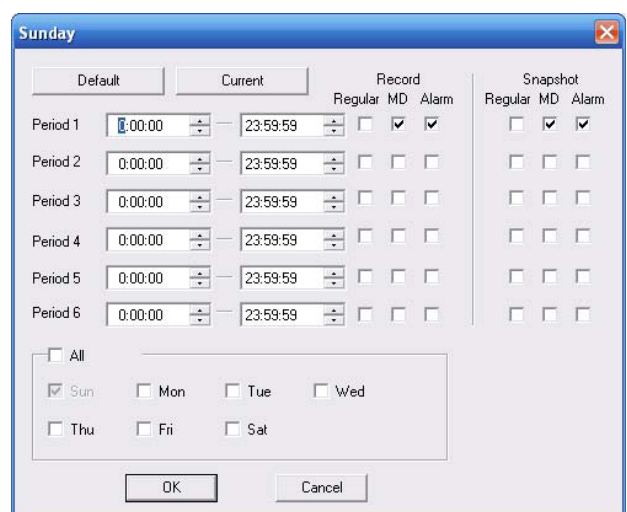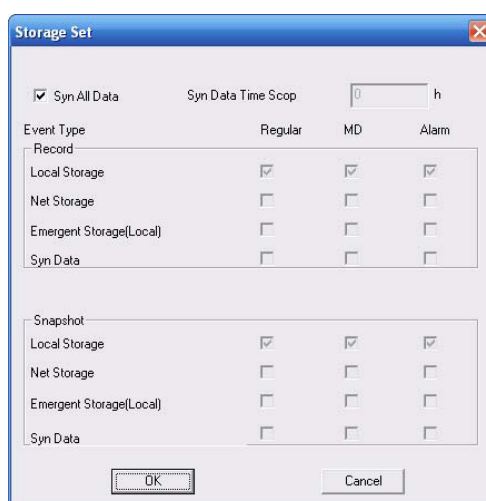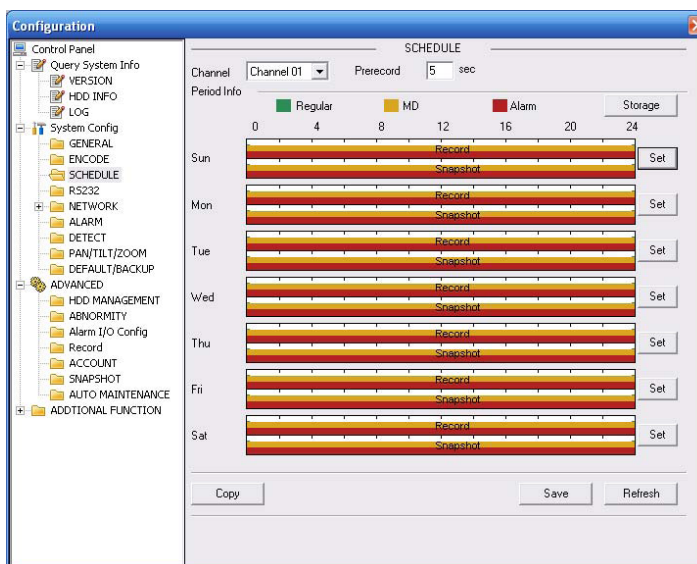


Refer to the following sheet for detailed information.

Parameter	Function
Channel	Select a channel first.
Pre-record	Input pre-record value here. System can record the three to five seconds video before activating the record operation into the file. (Depends on data size).
Storage	System support record/snapshot file local storage mode only.
Setup	- Click set button, to go to the corresponding setup interface. - Set schedule period and select corresponding record or snapshot type: motion detection/snapshot, and alarm/snapshot. System does not support schedule/snapshot function, - Select date (Current setup applies to current day by default. Select all to apply the setup to the whole week.) - After complete setup, go back and click save to save current time period setup.
Save	Click save button after complete setup for one channel, or complete the whole setup and click save button.
Refresh	Click this button to get device latest configuration information.

Note : System does not support regular recording on SD card.

7.2.4 RS232

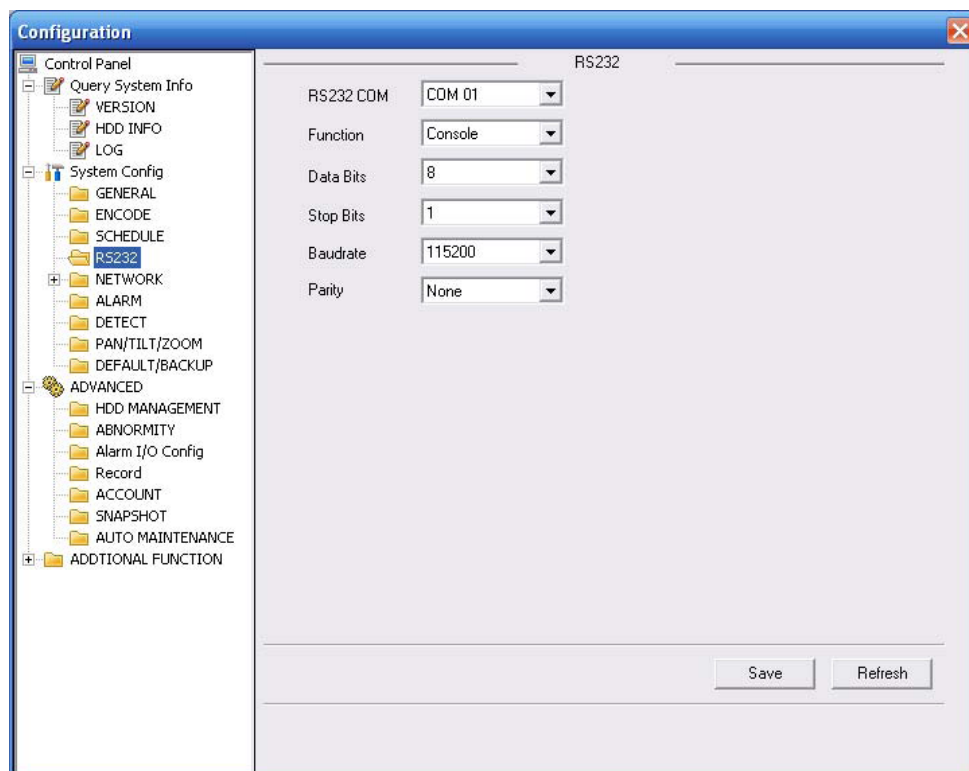

Refer to the following sheet for detailed information

Parameter	Function
RS232	There is only one option COM 01, corresponding to RS232
Function	Console is for debug.
	Control keyboard: Switch between RS232 and control keyboard.
	Network keyboard: COM control protocol. You can use network keyboard to control IPC via COM.
	Transparent COM: Network user can communicate with RS232 COM device.
	Alarm box: not used.
	COM_GPS: not used.
	COM_RADAR: not used.
Data Bit	The value ranges from 5 to 8.
Stop Bit	There are two options: 1/2.
Baud Bit	You can select corresponding baud bit here.
Parity	There are five options: none/odd /even/mark/space.

7.2.5 Network

Network interface

Configuration

Control Panel

- Query System Info
 - VERSION
 - HDD INFO
 - LOG
- System Config
 - GENERAL
 - ENCODE
 - SCHEDULE
 - RS232
 - NETWORK**
 - EMAIL
 - DDNS
 - NAS
 - NTP
 - IP-FILTER
 - ALARM
 - DETECT
 - PAN/TILT/ZOOM
 - DEFAULT/BACKUP
- ADVANCED
 - HDD MANAGEMENT
 - ABNORMALITY
 - Alarm I/O Config
 - Record
 - ACCOUNT
 - SNAPSHOT
 - AUTO MAINTENANCE
- ADDITIONAL FUNCTION

NETWORK

Ethernet Port: Port 01 ☐ DHCP

IP Address: 10 . 12 . 5 . 28 Mac Address: 00:11:22:33:45:55

Subnet Mask: 255 . 255 . 0 . 0

Gateway: 10 . 12 . 0 . 1

Device Name: 00-11-22-44-55

TCP Port: 37777 HTTP Port: 80

UDP Port: 37778 Max Connection: 4

Preferred DNS: 202 . 101 . 172 . 35

Alternate DNS: 202 . 101 . 172 . 35

☐ Transfer Latency

Service Type: MULTICAST

User Name: Password: IP Address: 239 . 255 . 42 . 42 Port: 36666 1~65535

Default Save Refresh

Refer to the following sheet for detailed information

Parameter	Function
Ethernet	Select the network card first. Port 1 is the ethernet port. Port 2 is the wireless port (if available).
DHCP	Dynamically get IP address. Get the device IP address from the server if this function is enabled.
Device Name	Device ID in the network.
TCP Port	Default value is 37777.
HTTP Port	Default value is 80.
UDP Port	Default value is 37778.
DNS	Manually set IP address of DNS.
Alternative DNS	You need to enable this function if you are inputting the domain name in some items. Otherwise the system can not parse the domain name.
Max Connection	Simultaneously, network users max amount. The value ranges from 1 to 10.
Network transmission QoS	Set the priority between fluency and video quality or self-adaptive. System can automatically adjust the bit stream or lower the resolution according to the network bandwidth.

Advance interface

The screenshot shows a configuration interface with the following fields:

- Service Type: A dropdown menu currently showing "MULTICAST".
- User Name: An empty text input field.
- Password: An empty text input field.
- IP Address: A text input field containing "239 . 255 . 42 . 42".
- Port: A text input field containing "36666".

Parameter		Function
Remote Host	Multiple cast group	- Set MULTICAST address and port. - Enable function. - Current series IPC does not support this function right now.
	PPPOE	- Input the PPPoE user name and password you get from the IPS (internet service provider) and enable PPPoE function. Save current setup and reboot the device to get the setup activated. - Device connects to the internet via PPPoE after reboot. Get the IP address in the WAN from the IP address column.


Email Interface

The screenshot shows a 'Configuration' window with a tree view on the left and a settings panel on the right. The tree view includes 'Control Panel', 'Query System Info', 'HDD INFO', 'LOG', 'System Config', 'GENERAL', 'ENCODE', 'SCHEDULE', 'RS232', 'NETWORK', 'EMAIL', 'DDNS', 'NAS', 'NTP', 'IP-FILTER', 'ALARM', 'DETECT', 'PAN/TILT/ZOOM', 'DEFAULT/BACKUP', 'ADVANCED', 'HDD MANAGEMENT', 'ABNORMALITY', 'Alarm I/O Config', 'Record', 'ACCOUNT', 'SNAPSHOT', 'AUTO MAINTENANCE', and 'ADDITIONAL FUNCTION'. The 'EMAIL' folder is selected. The settings panel on the right is titled 'EMAIL' and contains the following fields: 'SMTP Server' (www.Yahoo.com), 'Port' (25), 'User Name' (anonymity), 'Password' (XXXX), 'Sender' (anonymity@yahoo.com), 'Subject' (DVR Message), 'Receiver 1', 'Receiver 2', and 'Receiver 3'. There is an 'Enable' checkbox which is checked. At the bottom right of the settings panel are 'Save' and 'Refresh' buttons.

Please refer to the following sheet for detailed information.

Parameter	Function
SMTP Server	Input server address and then enable this function.
Port	Default value is 25. Modify it if necessary.
User Name	Sender email account user name.
Password	Sender email account password.
Sender	Sender email address.
Subject	Input email subject here.
Address	Input receiver email address here. Max three addresses.

DDNS interface

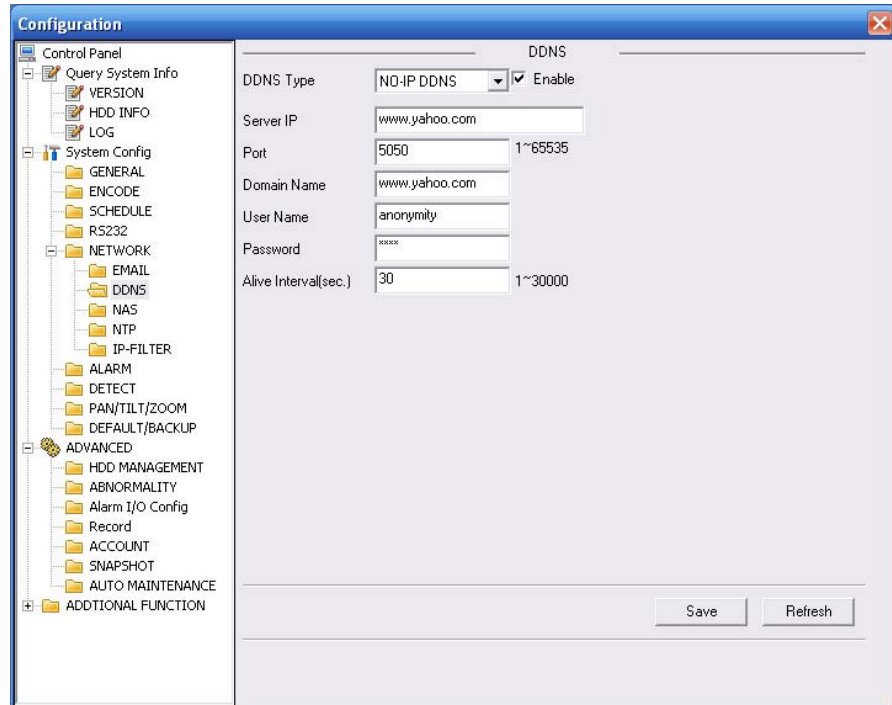

Refer to the Annex 1 for NO-IP DDNS setup information.
Refer to the following sheet for detailed information.

Parameter	Function
Server Type	Select DDNS protocol from the dropdown list and then enable DDNS function. The private DDNS protocol means you use your self-defined private protocol to realize DDNS function.
Server IP	DDNS server IP address.
Server Port	DDNS server port.
Domain Name	Self-defined domain name.
User	User name you input to log in the server.
Password	Password you input to log in the server.
Interval	Device sends out alive signal to the server regularly. Set interval value between the device and DDNS server here.

NAS interface

This device does not support this function.

NTP interface

Realize network time synchronization. Enable current function and input server IP, port number, time zone and time.


The screenshot shows a 'Configuration' window with a tree view on the left and a configuration area on the right. The tree view includes 'Control Panel', 'Query System Info', 'System Config', 'NETWORK', 'ALARM', 'ADVANCED', and 'ADDITIONAL FUNCTION'. The 'NTP' option under 'NETWORK' is selected. The configuration area on the right has a title bar 'NTP' and contains the following fields: 'Enable' (checked), 'Server IP' (clock.isc.org), 'Port' (37), 'Time Zone' (GMT+08:00), and 'Update Period' (7 Minute). At the bottom right are 'Save' and 'Refresh' buttons.

Refer to the following sheet for detail information.

Parameter	Function
Enable	Enable NTP function or not.
Server IP	Server IP address
Port	Server port.
Time Zone	Device current time zone.
Update Interval	Time update interval value.

IP Filter interface

Enable IP filter function so that some specified IP user can or not access the device.
You can not set white list and black list function at the same time.

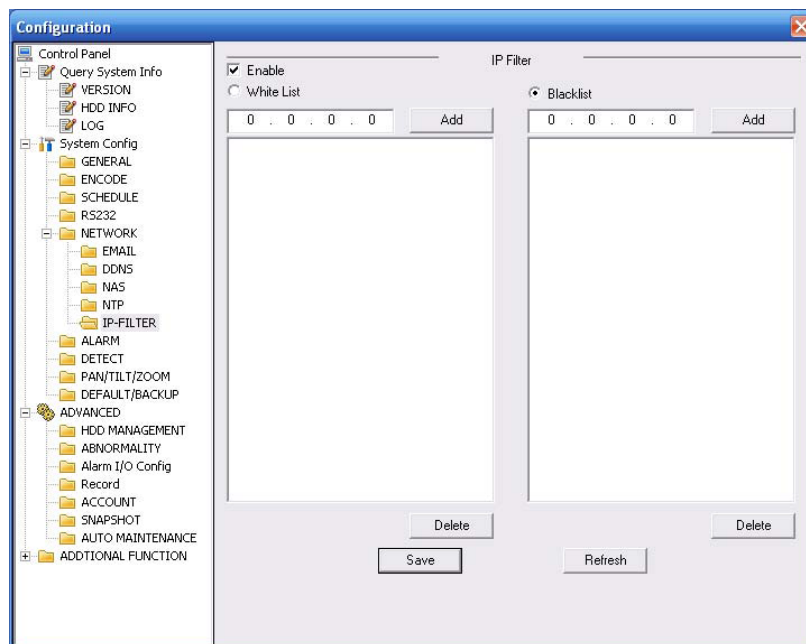

7.2.6 Alarm



The screenshot shows a 'Configuration' window with a tree view on the left and a settings panel on the right. The tree view includes 'Control Panel', 'Query System Info' (with sub-items VERSION, HDD INFO, LOG), 'System Config' (with sub-items GENERAL, ENCODE, SCHEDULE, RS232, NETWORK, ALARM, DETECT, PAN/TILT/ZOOM, DEFAULT/BACKUP), 'ADVANCED' (with sub-items HDD MANAGEMENT, ABNORMALITY, Alarm I/O Config, Record, ACCOUNT, SNAPSHOT, AUTO MAINTENANCE), and 'ADDITIONAL FUNCTION'. The 'ALARM' settings panel is titled 'ALARM' and contains the following fields:

- Event Type: Local Alarm (dropdown)
- Alarm In: Input 01 (dropdown) with a checked checkbox
- Type: Normal Close (dropdown)
- Period: Set (button)
- Anti-dither: 0 sec. 0~15 (text input)
- ☒ Alarm Out: 1 (text input)
- Latch: 10 sec. 10~300 (text input)
- ☒ Record Channel: 1 (text input)
- Record Latch: 10 sec. 10~300 (text input)
- ☒ Send Email
- ☐ PTZ Activation: Set (button)
- ☐ Capture: 1 (text input)

At the bottom of the settings panel are four buttons: Copy, Default, Save, and Refresh.

Parameter	Function
Event Type	It includes local alarm/network alarm. - Local alarm: Device detects alarm from input port. - Network: Device detects alarm from network.
Alarm in	Select corresponding alarm channel.
Enable	Check to enable the alarm function.
Type	There are two options: normal open and normal close. NO becomes activated in low voltage, NC becomes activated in high voltage..
Period	- Alarm record function becomes activated in the specified periods. - There are six periods in one day. Enable corresponding period. - Select date or whole week. - Click OK button, system goes back to alarm setup interface, please click save button to exit.
Anti-dither	System only memoryze one alarm during the period set here (0 to 600 s)
Normal Out	Select alarm output port so that system can activate corresponding alarm device when alarm occurs.
Alarm Latch	System delay the alarm output for specified time after alarm end (from 10 seconds to 300 seconds).
Record Channel	System auto activates current channel to record once alarm occurs (working with alarm activation function). Note current device shall be in auto record mode (Chapter 7.2.3 Schedule).
Record Latch	System can delay the record for specified time after alarm ended. The value ranges from 10s to 300s.
Email	Check to enable email function. System can send email when alarm occurs and ends.
Tour	This function is not available in current device.
PTZ activation	The system can go to a preset when alarm occurs (only for IP speed dome).
Capture	Input capture channel number so that system can backusnapshot file to the SD card or send to the specified email box when alarm occurs.
Copy	It is a shortcut menu button. You can copy current channel setup to one or more (all) channels.
Save	You can click save button after you complete setup for one channel, or you can complete the whole setups and then click save button.
Refresh	Click this button to get device latest configuration information.

7.2.7 Detect

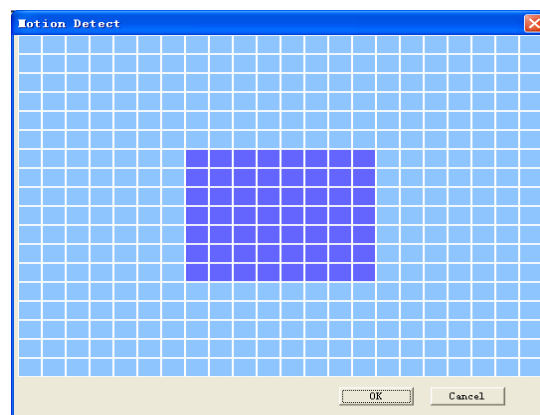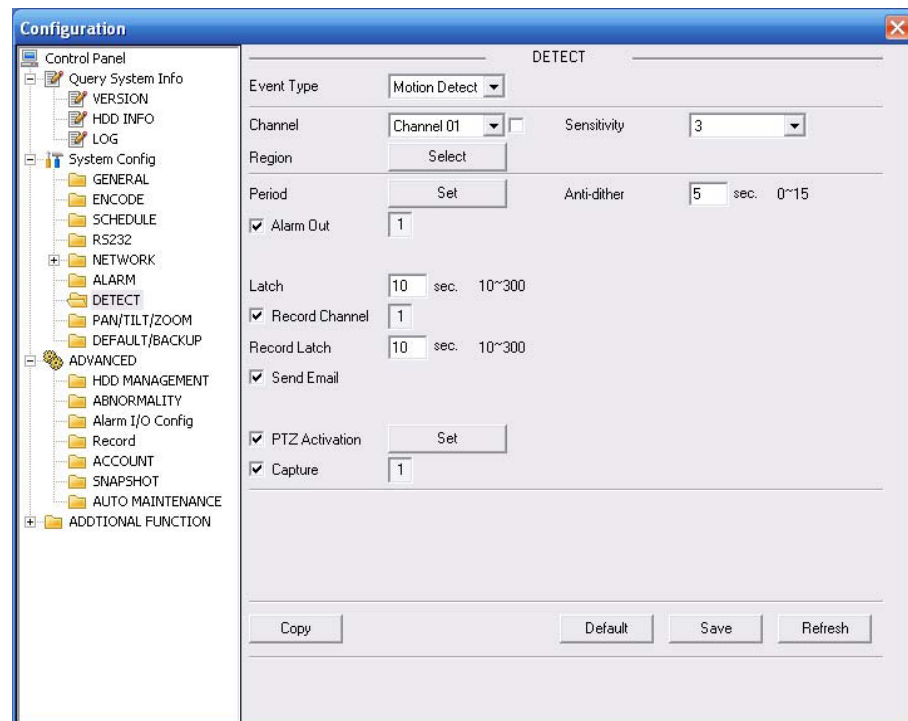

The dark blue squares correspond to a zone with active detection.

Refer to the following sheet for detailed information.


Parameter	Function
Event Type	There are three types: Motion detection/Video loss/Camera Masking.
Channel	Select channel name from the dropdown list.
Enable	Check to enable motion detection function.
Sensitivity	There are six levels. The level 6 has the highest sensitivity.
Region	- Region: after you select motion detection type, click this button to set motion detection zone. - There are PAL 22X18/NTSC 22X15 zones. - Double right click mouse you can go to full-screen display mode. - Remember clicking OK button to save your motion detection zone setup.
Period	- Motion detection function becomes activated in the specified periods. - There are six periods in one day. Enable corresponding period. - Select date or whole week. - Click OK button, system goes back to motion detection interface. - Click save button to exit.
Anti-dither	System only memorizes one event during the anti-dither period. The value ranges from 0s to 15s..
Normal out	- There is 1-channel alarm output. - Corresponding to motion detection alarm output port. - Enable alarm activation function. You need to select alarm output port so that system can activate corresponding alarm device when alarm occurs..
Alarm Latch	System can delay the alarm output for specified time after alarm end. The value ranges from 10 seconds to 300 seconds.
Record Channel	System auto activates motion detection channel to record once alarm occurs (works with motion detection function). Note you need to go to chapter 7.2.3 Schedule to set motion detection record period and go to chapter 7.3.3 Record to set current period as auto record.
Record Latch	System can delay the record for specified time after alarm ended. The value ranges from 10 seconds to 300 seconds..
Email	Send email when alarm occurs and ends.
PTZ activation	Set PTZ movement when alarm occurs. Such as go to preset x when there is an alarm.
Capture	Input capture channel number so that system can backup motion detection snapshot file.
Save	Click save button after complete setup for one channel, or complete the whole setups and click save button.
Refresh	Click this button to get device latest configuration information.

7.2.8 Default & Backup

Default: Restore factory default setup. Select corresponding items.

Backup: Export current configuration to local PC or import configuration from current PC.

System can't restore some information such as network IP address.

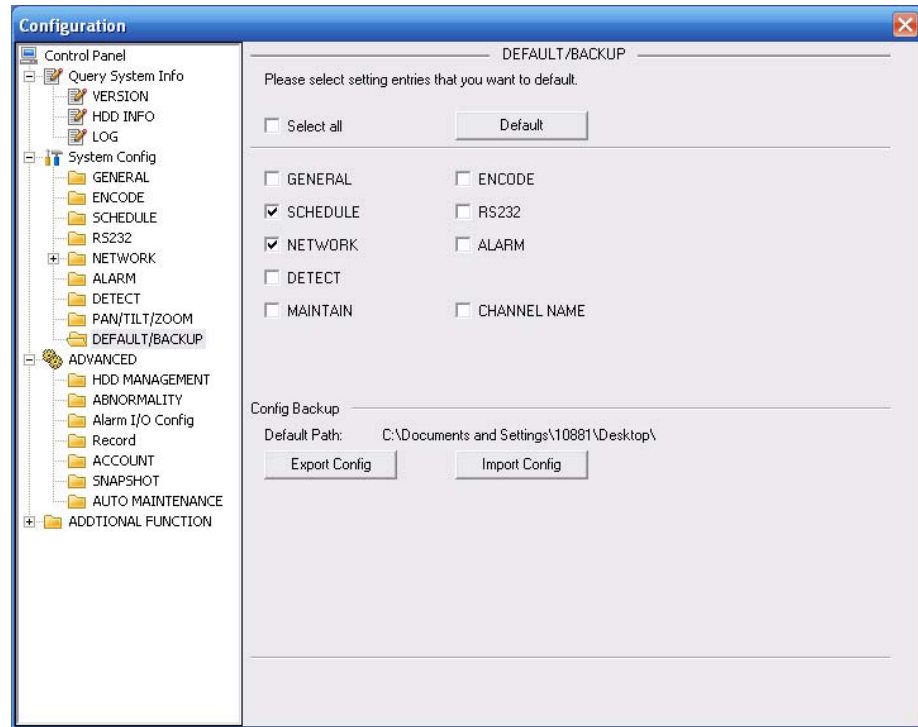


Refer to the following sheet for detailed information.

Parameter	Function
Select All	Restore factory default setup.
Export Configuration	Export system configuration to local PC.
Import Configuration	Import configuration from PC to the system.

7.3 Advanced

7.3.1 HDD Management


HDD management includes net storage management and local storage management. Select the storage device first and then the items on your right become valid. Check the corresponding item here. Click the Execute the button; system needs to reboot to activate current setup.

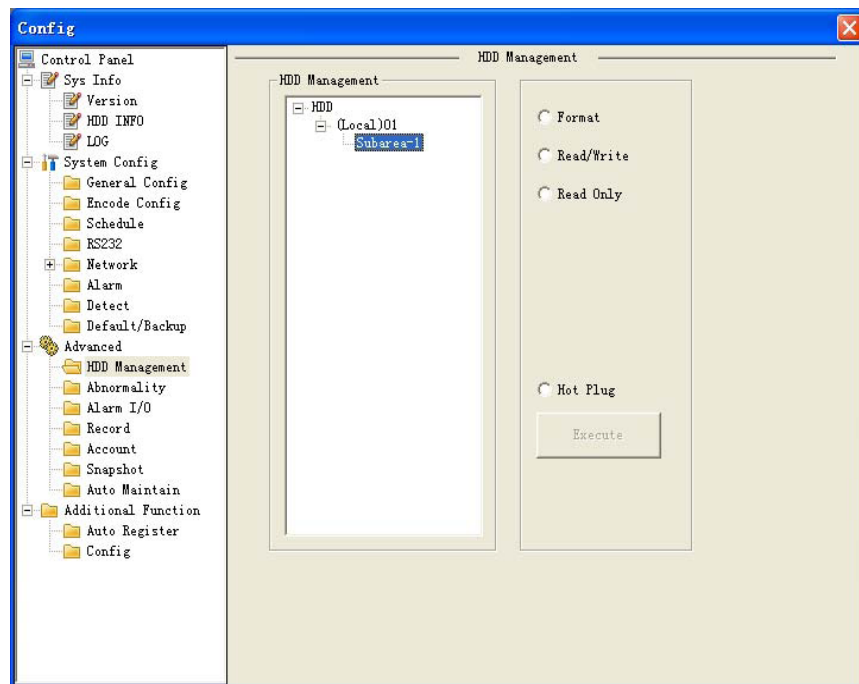

Refer to the following sheet for detailed information.

Parameter	Function
Format	Clear data in the disk
Read/write	Set current disk as read/write
Read only	Set current disk as read.
Hot swap	This function allows to hot swap the disk when the device is working. This function will not result in disk malfunction.
Execute	Click this button to save disk current status.


7.3.2 Alarm I/O

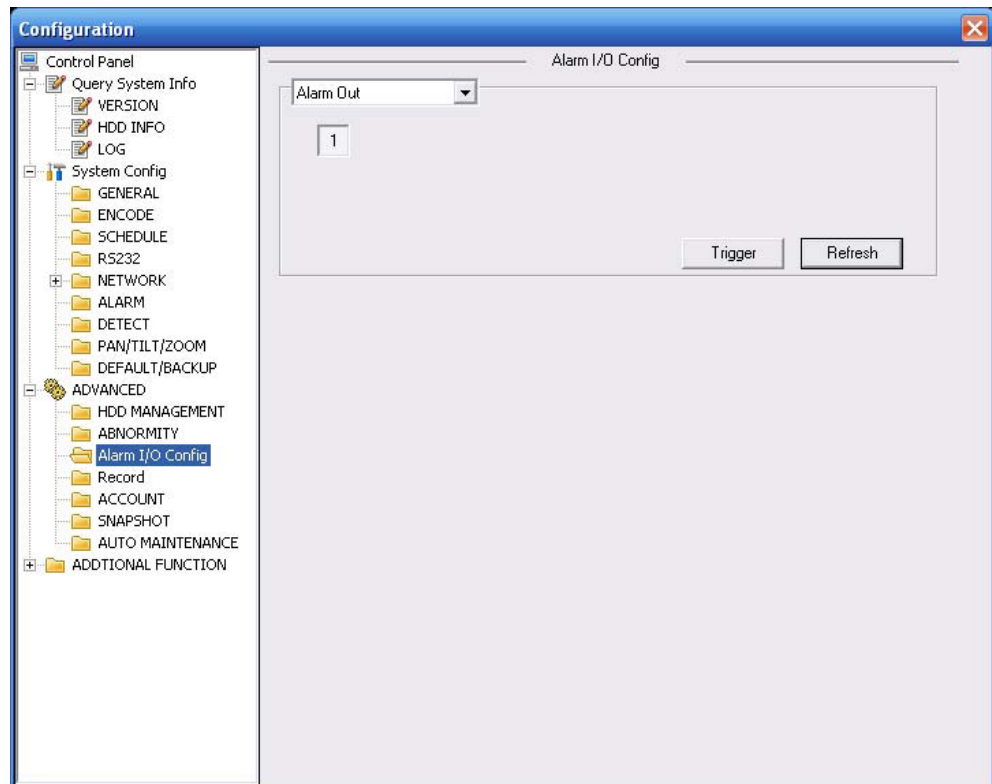

Refer to the following sheet for detailed information.

Parameter	Function
Alarm output	There is only one output channel. Please click the button 1.
Trigger	Enable/disable alarm output device.
Refresh	Search alarm output status.

7.3.3 Record

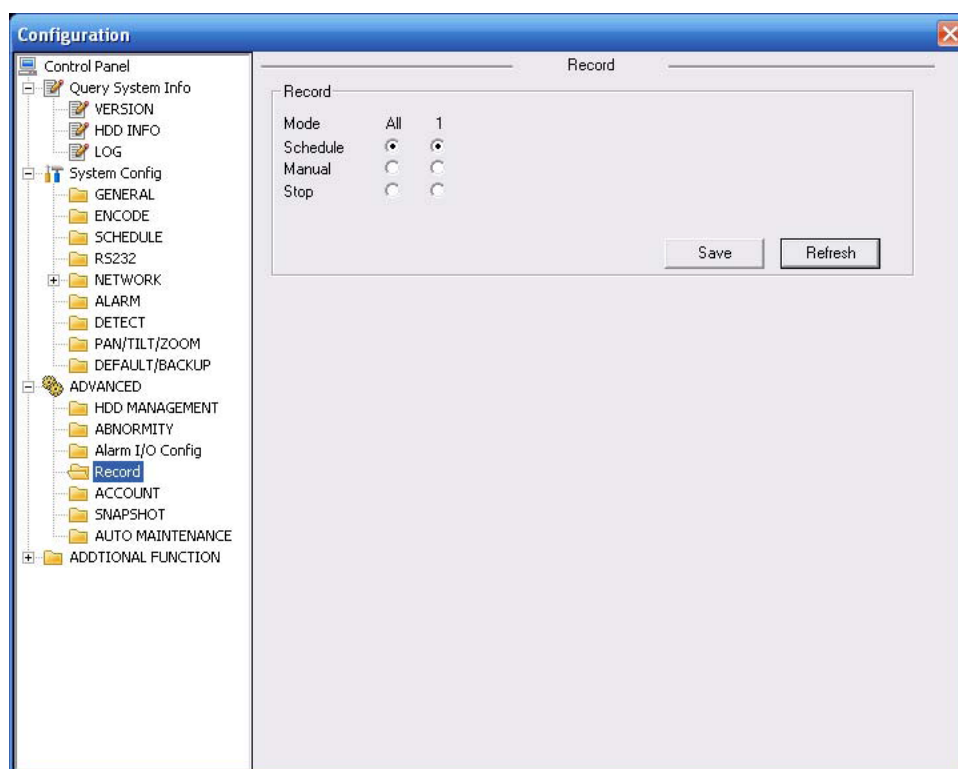


Refer to the following sheet for detailed information.

Parameter	Function
Auto	System enables auto record function as set in record schedule setup.
Manual	Not available.
Stop	Stop current channel record, no matter what period applied in the record schedule setup.

7.3.4 Account


Add, remove user or modify password.

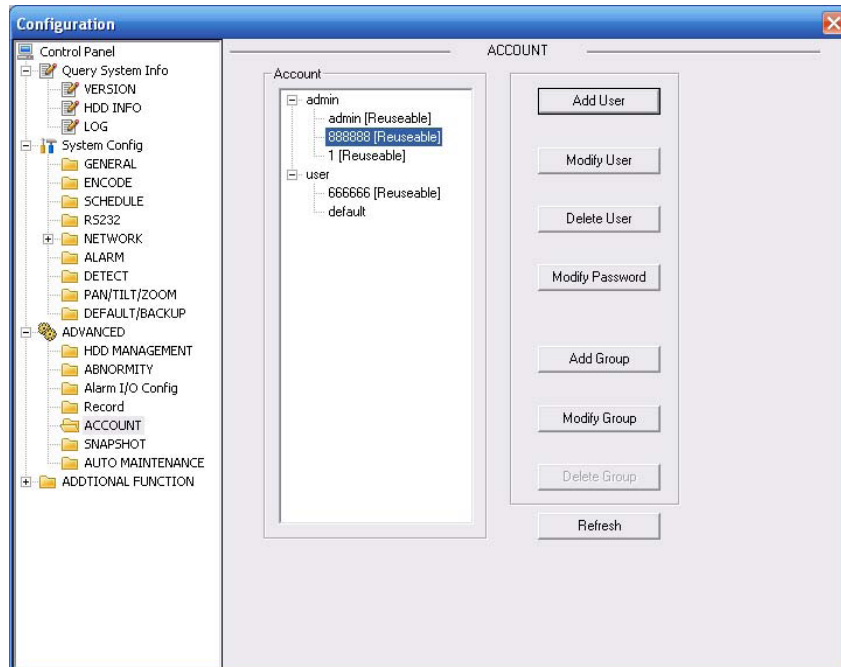


Note : Reusable means that the account can be use for different login at the same time.

7.3.5 Auto Maintenance

Select auto reboot and auto delete old files interval.

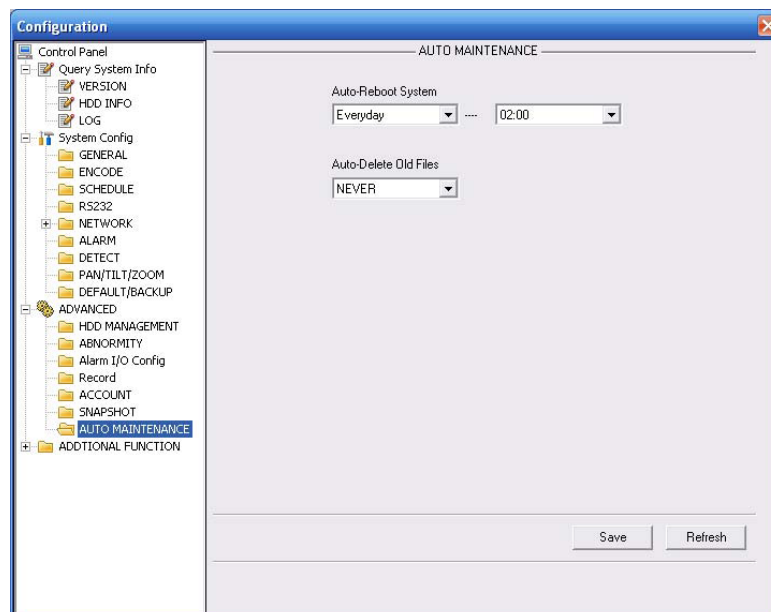


7.3.6 Snapshot

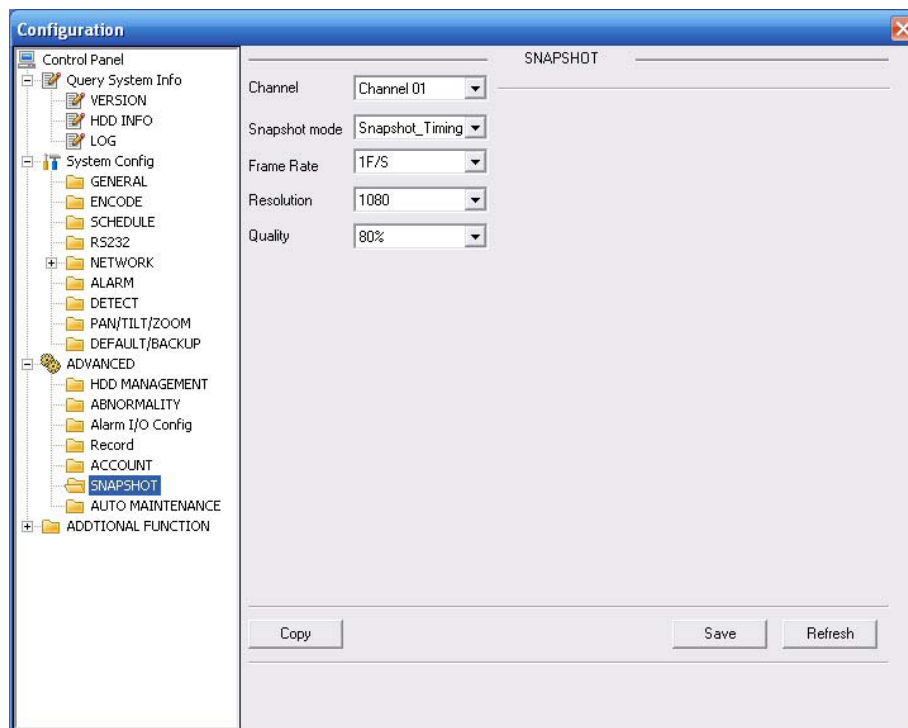

Refer to the following sheet for detailed information.

Parameter	Function
Channel	Monitor channel.
Snapshot mode	Two modes: Timing and activation.
Frame rate	Select from the dropdown list. The value ranges from 1f/s to 8f/s.
Resolution	Select from the dropdown list. The resolution may vary due to different series.
Quality	Select from the dropdown list. Here is for you to set video quality.

7.3.7 Abnormity

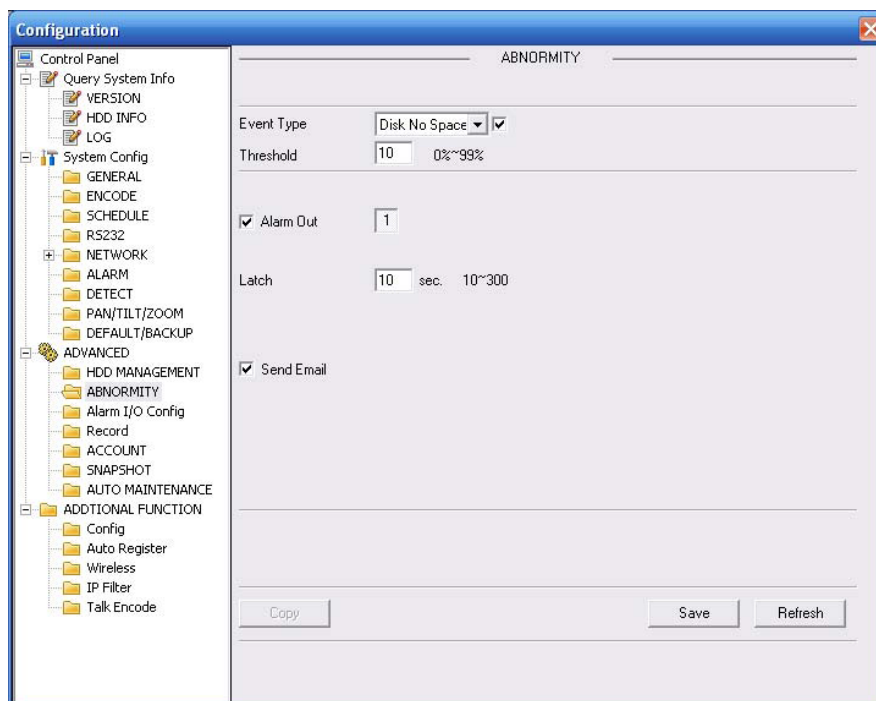


Refer to the following sheet for detailed information.

Parameter	Function
Event Type	- The abnormal events include: no disk, no space, disk error, net error, offline, IP conflict. - XXXX Space Alarm: Set the minimum percentage value here. The device can alarm when capacity is not sufficient. - Check enable this function.
Normal Out	Corresponding alarm output channel when alarm occurs, there is one channel.
Record channel	System auto activates channel to record once alarm occurs (for offline type only). Please note you need to go to chapter 7.3.3 record to set current period as auto record.
Latch	The alarm output can delay for the specified time after alarm stops. The value ranges from 10s to 300s
Send email	System send email to alarm the specified user. This function is invalid when network is offline or IP conflict occurs.

7.4 Additional Function

7.4.1 Configure


Set camera property parameter. The following interface may vary regarding different devices.

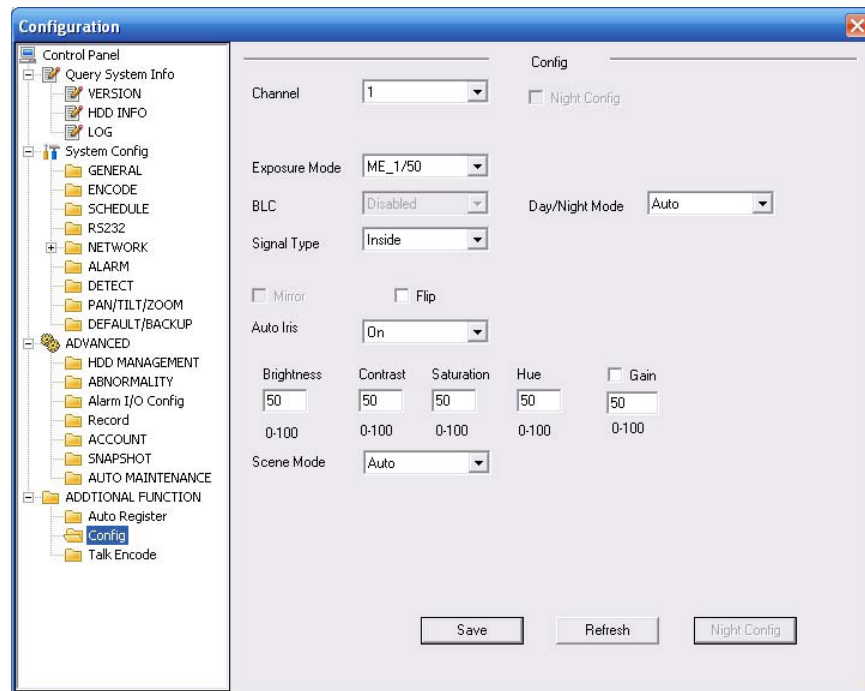

Refer to the following sheet for detailed information.

Parameter	Function
Channel	Monitor channel 1
Exposure Mode	There are two modes: Auto exposure (AE) and Manual exposure (ME). There are some ME time ranges from 1/50 to 1/10000. It supports customized setup too (may be different depending of the device).
Day/Night Mode	IPC day night mode switch. There are three options: color-off/color-on/auto (may be different depending of the device).
Signal Standard	Video input mode: internal input.
Flip	It is to switch video up and bottom.

7.4.2 Auto Register

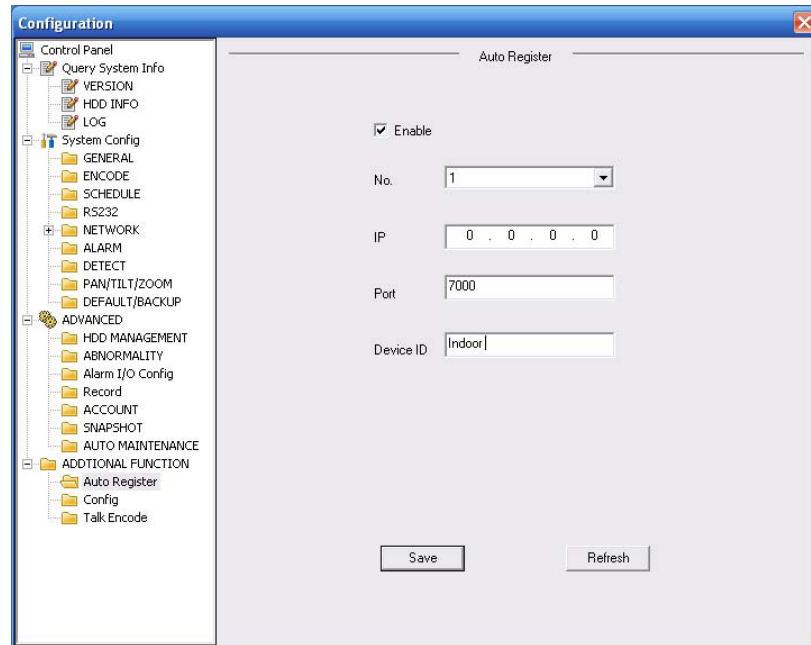


Refer to the following sheet for detailed information.

Parameter	Function
Enable	Enable auto register function.
No.	Device management server number.
IP	Device management server IP address.
Port	Server port number.
Device ID	Device ID in the device management server.

7.4.3 Talk Encode

Set audio compression bit rate. It includes PCM, G711a, G711u.

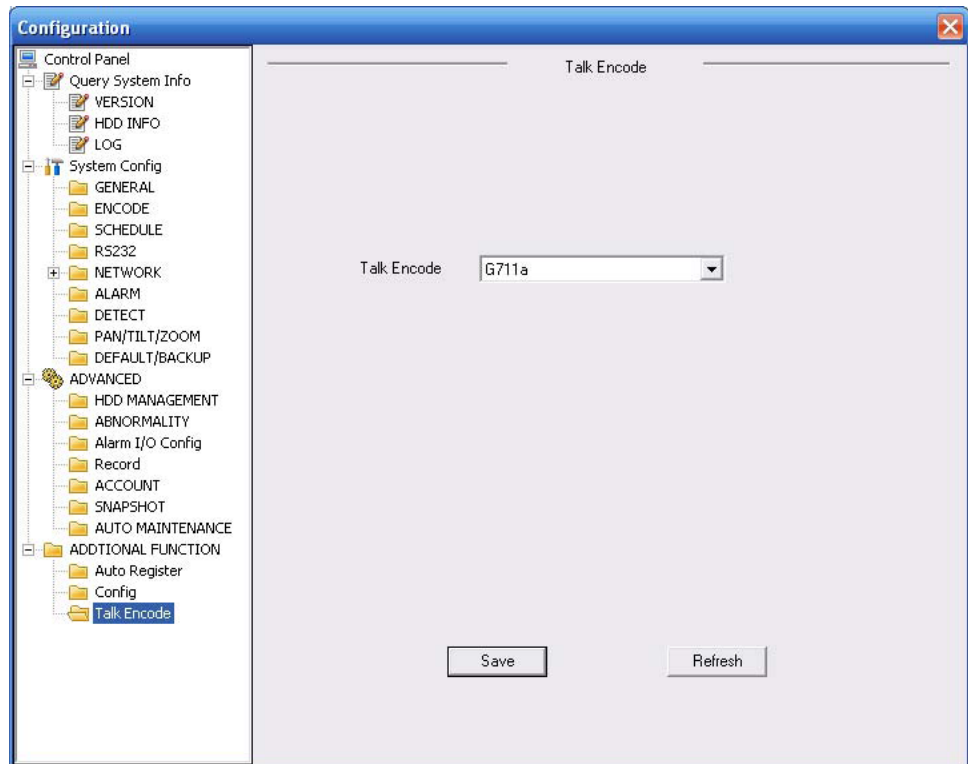

8 Search

See chapter 6.3 to see how to access to the configuration menu».



Click search button, the following interface appears:

The Search window contains the following sections:

- Type:** Radio buttons for Record, Alarm, Motion, Local (selected), Picture, and Card.
- Parameter:**
 - Begin Time: 2009- 8- 3 14:27:21
 - End Time: 2009- 8- 6 14:27:21
 - Channel: 1
 - Earliest Rec button
- Operation:** Search, Playback, Download Type (File), Download, Open Local Record, and Watermark buttons.
- Results Table:**

S/N	File Size(KB)	File Name	File Path
☒ 1	9541	10.10.5.82_ch1_20090806_143711.dav	C:\RecordDownload\1
- Footer:** Download Speed: 0 k/s, Page Down button, and a checkbox for Emphasize All.

Select record playback mode, and then select start time, end time and channel.

Click search button, the corresponding files in the list appears.

Select the file(s) to download and click download button, system pops up a dialogue box.

Specify file name and path to download the file(s) to PC.

Click Ok to complete the download procedure.

Refer to the following sheet for detailed information.

Type	Parameter	Function
Type	Record	Search general record, alarm record and motion detection record.
	Alarm	Search alarm record.
	Motion Detection	Search motion detection record.
	Local	Search local record.
	Picture	Search snapshot file.
	Card	This function is not available in current device.
Item	Start time	Set the file start time.
	End time	Set the file end time.
	Channel	Select the channel from the dropdown list.
Operation	Search	Click this button you can view the recorded file matched your requirements.
	Playback	Select the file first and then click playback button to view the video.

Type	Parameter	Function
	Download type	Download by file: Select the file(s) and then click download button. Download by time: Download the recorded file(s) during specified period.
	Download	Select the file needed (multiple choices) and click download button, system pops up a dialogue box. Input the downloaded file name, specify the path and then click OK button. System begins download and the download button becomes stop button. There is a progress bar.
	Open local record	Select local record to play.
	Watermark	Note : Go to chapter 7.2.2 Encode to enable watermark function first. Click watermark button, system pops up a dialogue box. Default watermark character is Digital CCTV. Click local file you can select the recorded file. Then click verify button to check file is original or not.
Multiple-channel playback		System supports playback one file in several monitor channels.

During the playback process, there are control buttons such as play, pause, stop, slow play and fast play in the play process bar.

9 Alarm

See chapter 6.3 to see how to access to the configuration menu».



Click alarm function, the following interface appears.
Set device alarm type and alarm sound setup. .

The 'Alarm' configuration window contains the following sections:

- Event Type:**
 - ☒ Video Loss
 - ☒ Encoder Alarm
 - ☒ Motion Detect
 - ☒ External Alarm
 - ☒ Disk Full
 - ☒ Disk Error
 - ☒ Video Mask
- Operation(External Alarm can not open video):**
 - ☒ Listen Alarm
 - ☒ Video Pop-up
 - ☒ Prompt
- Alarm Sound:**
 - ☒ Sound Pop-up
 - Sound Path: >>

Below the settings is a table with the following headers: Time, Device ID, Event Type, Alarm Port/Channel.

Refer to the following sheet for detailed information.


Type	Parameter	Function
Alarm Type	Video loss	System alarms when video loss occurs.
	Motion Detection	System alarms when motion detection alarm occurs,
	Disk full	System alarms when disk is full.
	Disk error	System alarms when disk error occurs.
	Camera masking	System alarms when camera is deliberately masking.
	Encode alarm	System alarms when encode module alarms.
	External alarm	Alarm input device sends out alarm.
Operation	Listening alarm	Check to activate live alarm notification.
	Video	Check to activate pop up video when alarm occurs (listening alarm loss to be activated (listening alarm has be activated)).
	Prompt	Automatically pops up alarm dialogue box (listening alarm has be activated).
	Sound pop up	System sends out alarm sound when alarm occurs.
	Path	Specify alarm sound file.

10 About

See chapter 6.3 to see how to access to the configuration menu».



View current web client information.

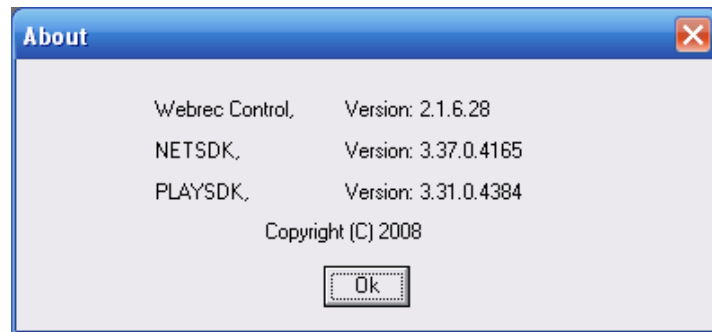


11 Log out

See chapter 6.3 to see how to access to the configuration menu».



System goes back to log in interface.

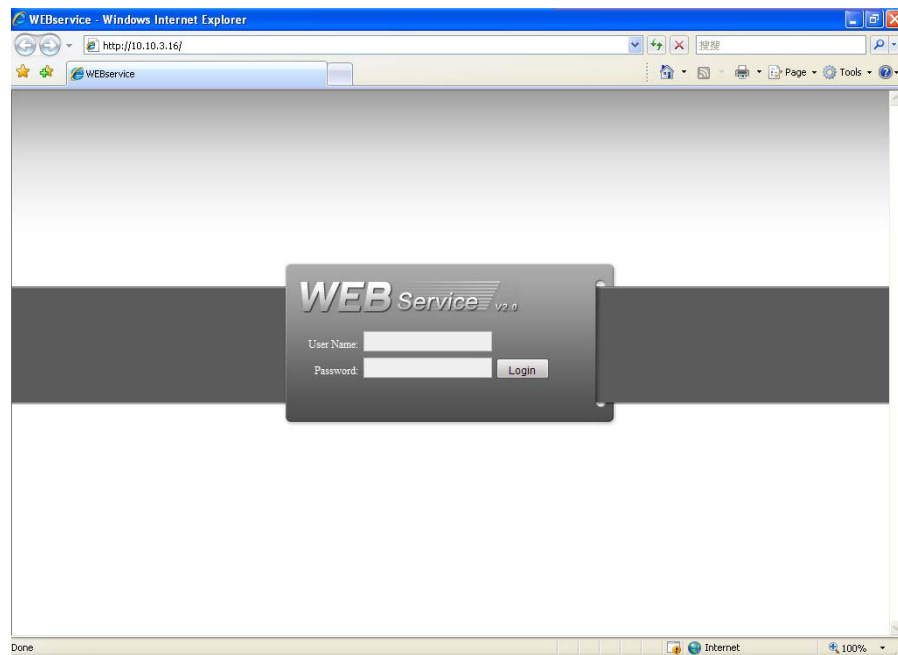

Annex 1: No-IP DDNS

If you do not have a Static IP address on the Internet, you need to have a dynamic IP. Because your IP address changes after a certain period of time.

So you need to configure a dynamic DNS service.

After completed configuration in the device. DDNS service can constantly inform the latest device's connection IP, and modify its IP on the table of data from the server.

Then you have a constant domain name in the Web browser, along with the HTTP port, send a request to identify the car IP of the domain name typed.

The server will redirect the domain name to the IP connection, thus allowing access to the device which does not have a fixed IP in the network.

Note: It is important to note that to gain access to the device in a local network, it is necessary to redirect the port of your modem or router to your device.

Click DDNS to go to the configuration interface. You can see an interface.

The screenshot shows a 'Configuration' window with a tree view on the left and a settings panel on the right. The tree view includes 'Control Panel', 'Query System Info', 'HDD INFO', 'LOG', 'System Config', 'GENERAL', 'ENCODE', 'SCHEDULE', 'RS232', 'NETWORK', 'EMAIL', 'DDNS', 'NAS', 'NTP', 'IP-FILTER', 'ALARM', 'DETECT', 'PAN/TILT/ZOOM', 'DEFAULT/BACKUP', 'ADVANCED', 'HDD MANAGEMENT', 'ABNORMALITY', 'Alarm I/O Config', 'Record', 'ACCOUNT', 'SNAPSHOT', 'AUTO MAINTENANCE', and 'ADDITIONAL FUNCTION'. The 'DDNS' option is selected. The settings panel on the right is titled 'DDNS' and contains the following fields: 'DDNS Type' (dropdown menu set to 'NO-IP DDNS'), 'Enable' (checkbox checked), 'Server IP' (text box with 'www.yahoo.com'), 'Port' (text box with '5050' and a range '1~65535'), 'Domain Name' (text box with 'www.yahoo.com'), 'User Name' (text box with 'anonymity'), 'Password' (text box with 'XXXX'), and 'Alive Interval(sec.)' (text box with '30' and a range '1~30000'). At the bottom right of the settings panel are 'Save' and 'Refresh' buttons.

- DDNS Type: You can select from the dropdown list. There are four options: No-IP, DynDNS, CN99, Private.
- Port: input server port here.
- Domain Name: Get the domain name you get from your DDNS service provider.
- User: Get the user name you get from your DDNS service provider.
- Password: Enter corresponding password.

Highlight the icon  in front of Enable to enable the DDNS server configuration.


To receive domain name in the No-IP DDNS service, please follow the steps listed below.

1. Please visit www.no-ip.com; the page of No-IP appears as below.



2. Left click mouse on the “Create Account” button, account Information interface


3. Fill in the requested fields and click I Accept button.
Then you can get an email containing username and password.
You can use this account to access the service.
4. Open the e-mail sent by trusted rmação No-IP and double-click the link that is below the phrase “To activate your account please click the following URL:” in the body of the email.

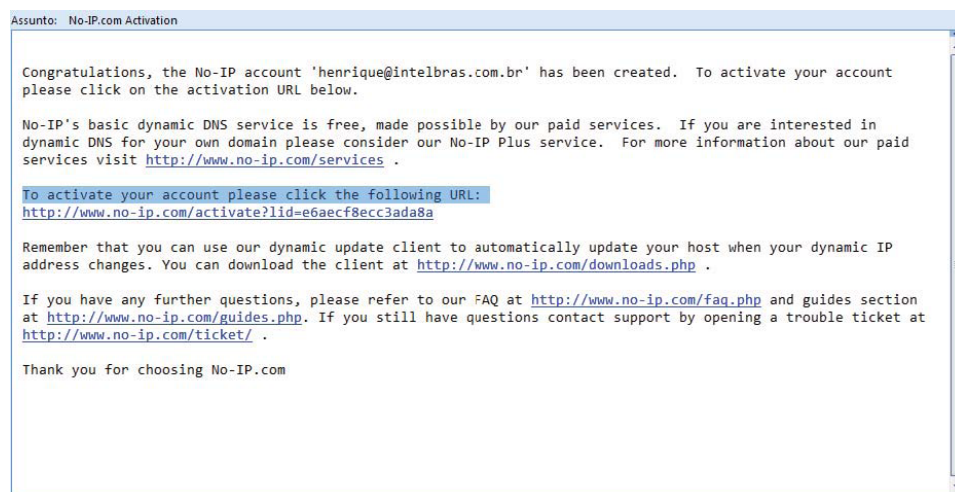


5. Now you can see an interface. You have successfully created an account.



6. Click to sign and enter the email address and password you get earlier. Click "login" to sign up, you can see the welcome interface and configuration option of account. You can highlight manage host item.

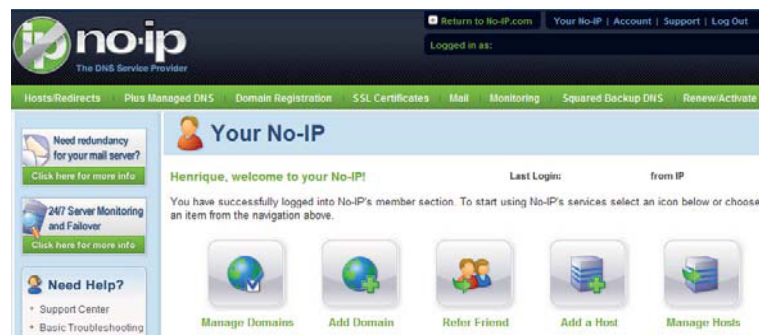

7. The Manage Hosts interface is shown below. Click the Add Host button you can access the creation of a domain name.

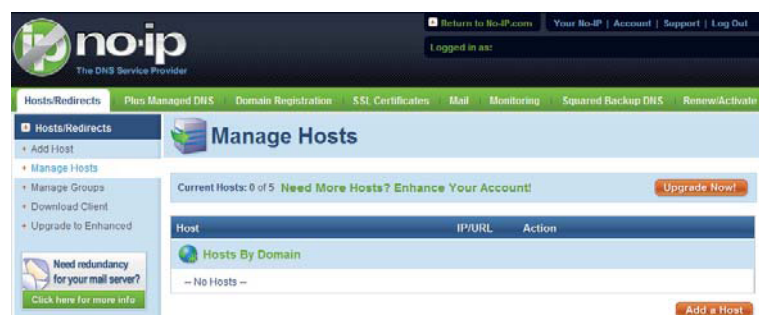

8. Input corresponding host name in the field. You can use this name to access device from an external network. In the field to the right of the name, select the desired area. This is your domain name for access to the device. Click "Create Host" button at the bottom of the page.

no-ip
The DNS Service Provider

Return to No-IP.com Your No-IP Account Support Log Out
Logged in as:

Hosts/Redirects Plus Managed DNS Domain Registration SSL Certificates Mail Monitoring Squared Backup DNS Renew/Activate

Add a host

Fill out the following fields to configure your host. After you are done click 'Create Host' to add your host.

Own a domain name?
Use your own domain name with our DNS system. Add your domain name now or read more for pricing and features.

Hostname Information

Hostname:

Host Type: ☒ DNS Host (A) ☐ DNS Host (Round Robin) ☐ DNS Alias (CNAME)
☐ Port 80 Redirect ☐ Web Redirect

IP Address:

Assign to Group: [Configure Groups](#)

Enable Wildcard: Wildcards are a Plus / Enhanced feature. [Upgrade Now!](#)

Accept Mail for your Domain
Let No-IP do the dirty work. Setup POP or forwarding for your name.

Mail Options

MX Record	MX Priority
	5

Enter the name of your external mail exchangers (mx records) as hostnames not IP addresses.

If you would like a more MX records, please upgrade to [No-IP Plus](#) or [Enhanced](#).

[Revert](#) [Create Host](#)

9. Now you can see an interface. Here you can view domain name and the computer's current IP setup. If you already have a domain name equal to gurado trusted, you must define another name for the host.

no-ip
The DNS Service Provider

Return to No-IP.com Your No-IP Account Support Log Out
Logged in as:

Hosts/Redirects Plus Managed DNS Domain Registration SSL Certificates Mail Monitoring Squared Backup DNS Renew/Activate

Manage Hosts

Host vd16s480st.no-ip.biz created

Current Hosts: 1 of 5 Need More Hosts? Enhance Your Account! [Upgrade Now!](#)

Host	IP/URL	Action
Hosts By Domain		
no-ip.biz		
vd16s480st.no-ip.biz	200.200.200.198	Modify Remove

[Add a Host](#)





10. Now you need to define the definition of the server's IP in IP-device able to access this service DDNS. To get DDNS service, you need to have a computer connected to the Internet on the same network with device. Type the command ping dynupdate.no-ip.com at the command prompt, Windows ®. The server's IP will be displayed on the screen. Your device can use this IP to find the No-IP server.

```

C:\>ping dynupdate.no-ip.com
Disparando dynupdate.no-ip.com [204.16.252.79] com 32 bytes de dados:
Resposta de 204.16.252.79: bytes=32 tempo=309ms TTL=235
Resposta de 204.16.252.79: bytes=32 tempo=318ms TTL=235
Resposta de 204.16.252.79: bytes=32 tempo=304ms TTL=235
Resposta de 204.16.252.79: bytes=32 tempo=329ms TTL=235
Estatísticas do Ping para 204.16.252.79:
  Pacotes: Enviados = 4, Recebidos = 4, Perdidos = 0 (0% de
perda),
Aproximar um número redondo de vezes em milissegundos:
  Mínimo = 304ms, Máximo = 329ms, Média = 315ms
C:\>_

```


11. Please go to the device and access the MAIN MENU> SETTING> NETWORK> DDNS. Input server IP you get in the above step. Select the DDNS Type as No-IP DDNS and highlight the icon ☐ in front of Enable to enable the DDNS function. Now fill the fields as described below, and click OK to save current setup.
 - **Server IP:** Enter the IP noted in step 10.
 - **Port:** Enter the port 80.
 - **Domain Name:** Enter the domain name created in step 8.
 - **User:** Enter your username (email address) created in step 3.
 - **Password:** Enter the password created in step 3.
12. Now you have completed device setup. Open Internet Explorer® in another foreign network with Internet access, unlike the network where the device is connected to, you need to follow the steps listed below:
 1. Enter the address into your browser: http://nome the field created in step 8.
For example: http://vd16s480st.no-ip.biz
 2. If the device HTTP port is 80, just type the domain name. Otherwise, enter in the browser address as:
http://nome the field created in Step 8: port number of HTTP.
For example: http://vd16s480st.no-ip.biz:9090
 3. Press Enter. The system will ask install application webrec.cab control or not. Please click Yes to perform a successful connection.
 4. If the page does not appear on the computer screen, you need to lower your system safety setup.
From Tools> Internet Options> Security, select Internet and then click Custom Level, you can enable ActiveX controls. See below . Then open your browser and re-enter the domain name of the device.

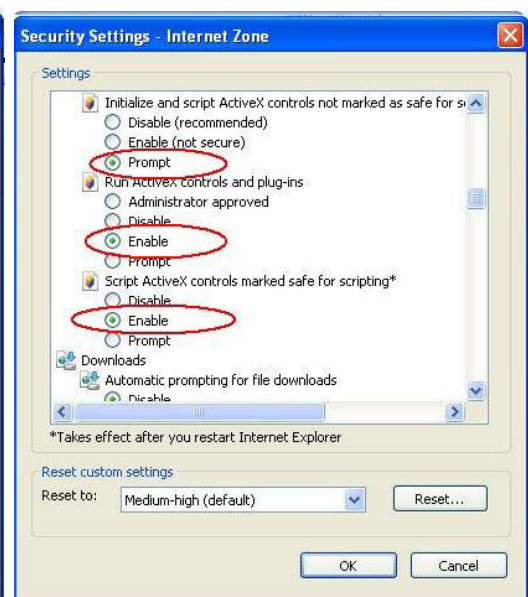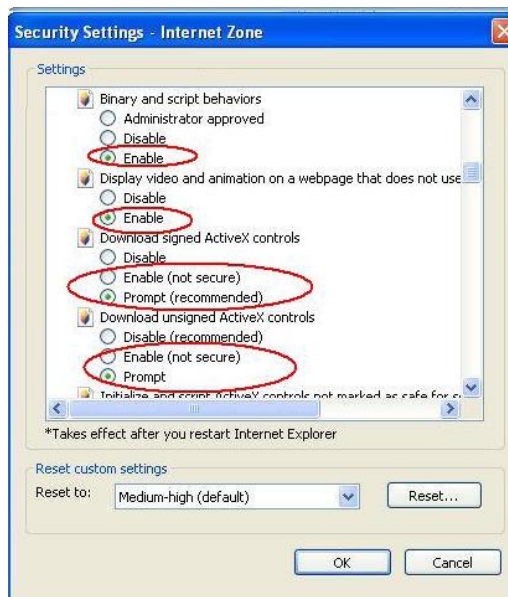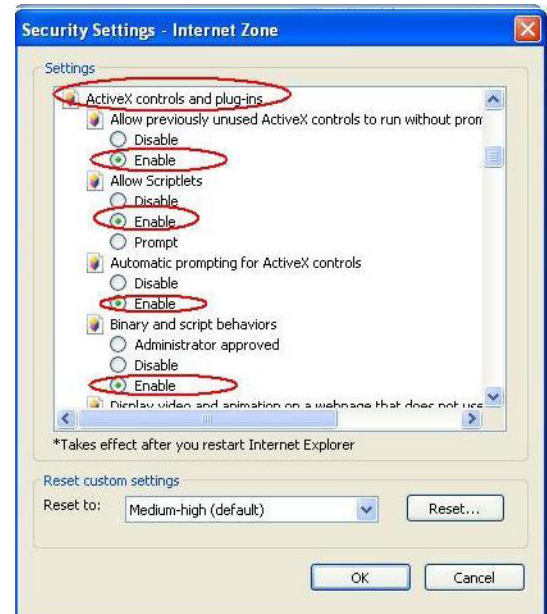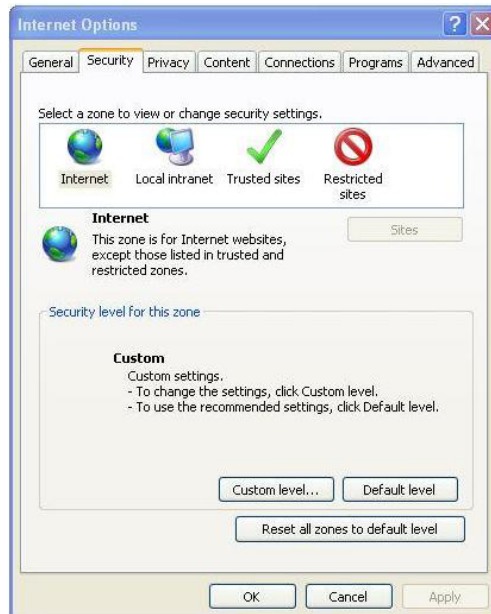


Annex 2: Using Google Chrome

1- Download and Install Extension


Click "Extension" in Google Chrome configuration dropdown list to go to the extension management interface.

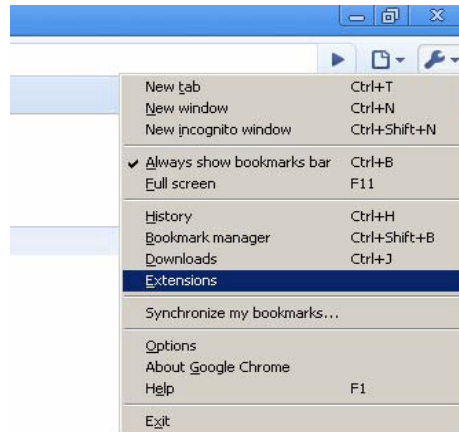

The Google Chrome extension management interface is shown below.

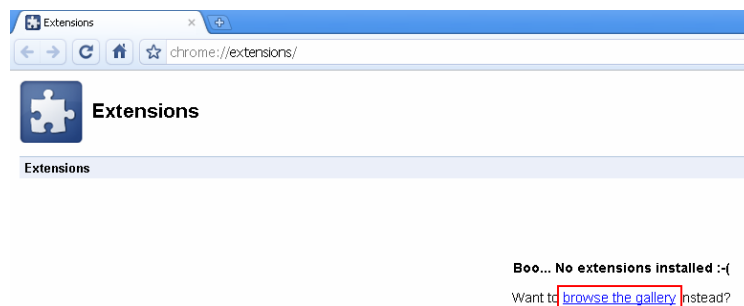


Click "Browse the gallery" and search for "IE Tab" extension.

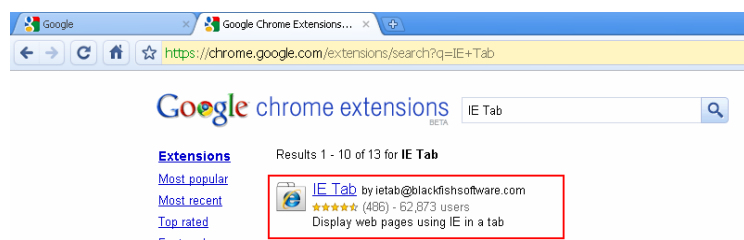

Install the latest "IE Tab" extension (version 1.0.11208.1 or above).




After installation, you will get an IE icon on top right of your Google Chrome interface.

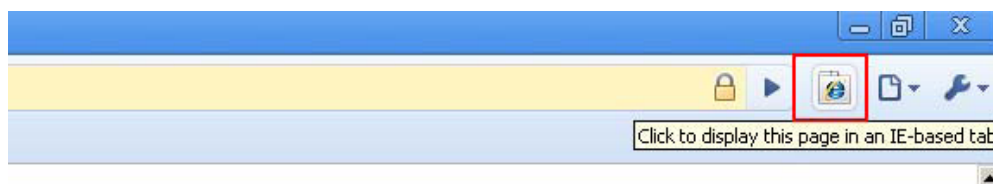


2. Visit Web Interface

- Get an IE address bar by clicking the icon showed previously.
- Enter the IP address of your device.

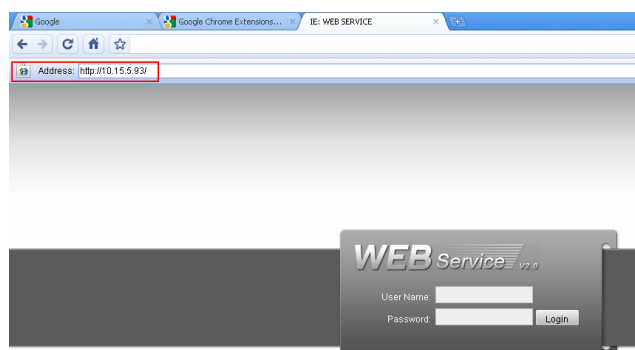


Annex 3: Using Firefox

- 1- Download and install extension:
- Click "Tools" and "Add-ons".
- Search and install IE Tab: ie_tab_plus-1.95.20100930-fx+sm

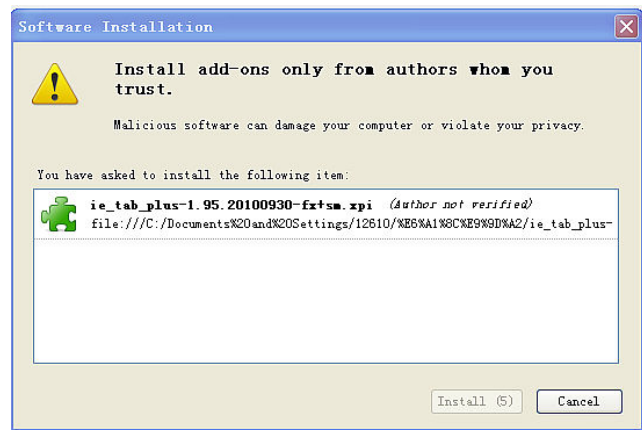


After installation, restart Firefox.


- 2- After restart of Firefox, choose Tools—Add-ons to check if the plugin has been installed.

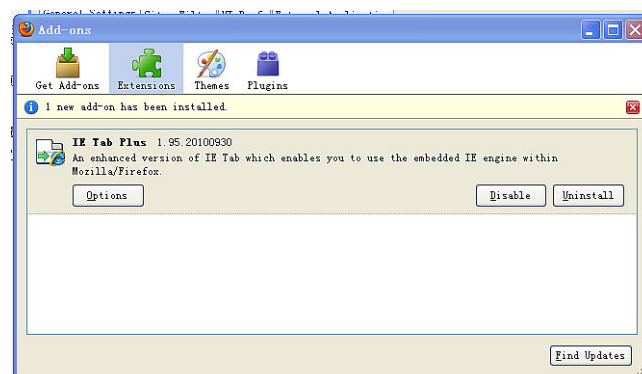


- 3- After installation, add the target address to IE Tab before start to access device web client. At the sametime, select IE Tab plus Mode.

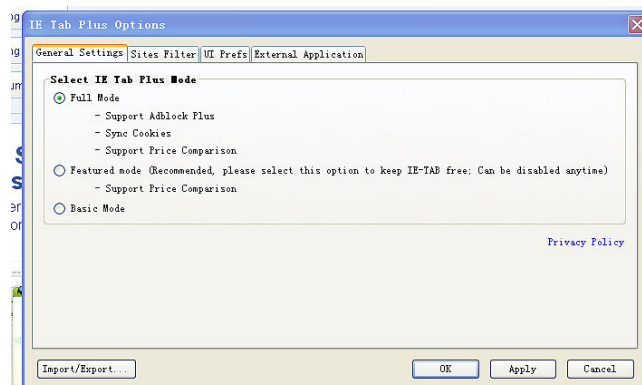



For example, here device address is http://10.15.5.127, so type "http://10.15.5.127/*" to the URL option.

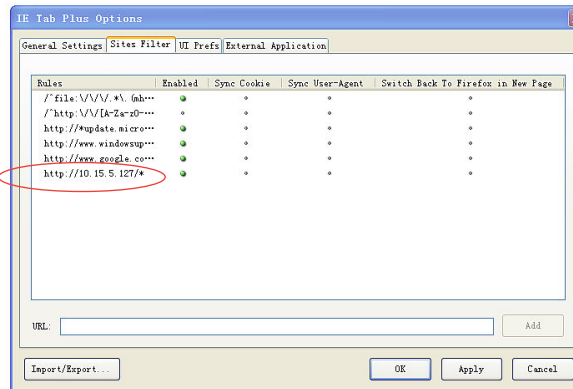

After this, open the webpage <http://10.15.5.127> with Firefox .

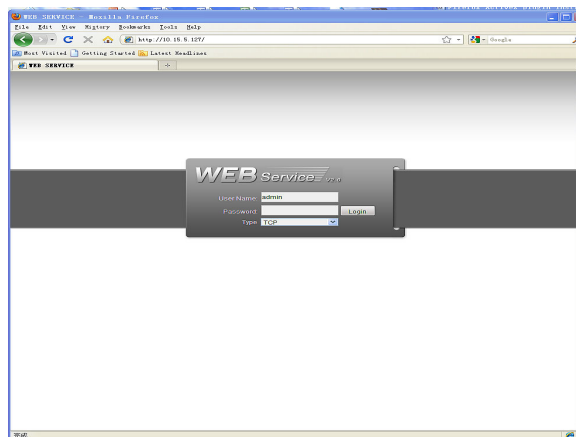


Note : If you have done the follows above and you still can not open the web normally, you need to check the setting in IE to enable downloading of the ActiveX.

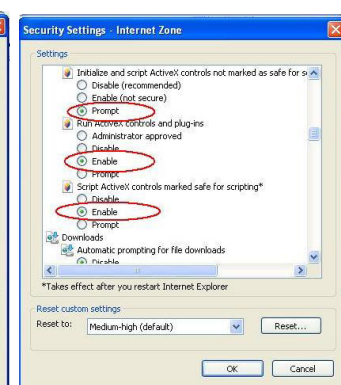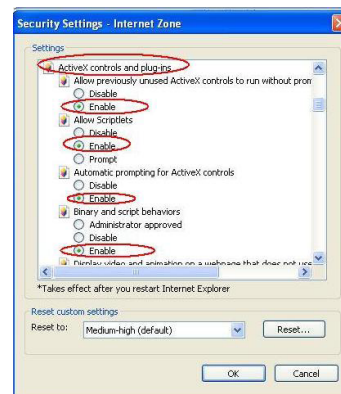

Annex 4: Using IE8

1- Run Web interface with IE8

With IE8, sometimes it will not run with the normal mode, there 2 ways to solve this.

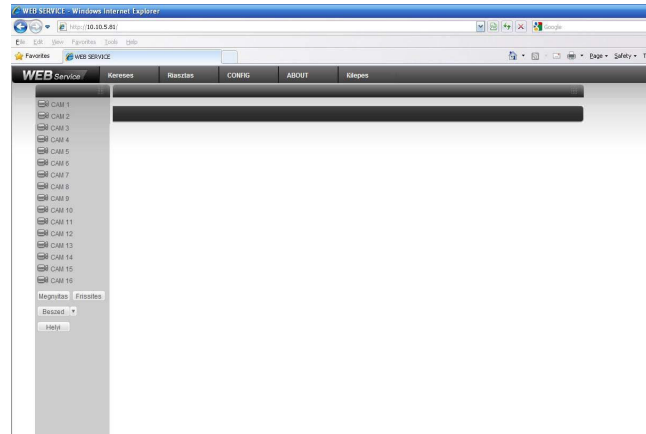


1.1 Use the Compatibility View function of IE8

With this way, every time you open the IE interface, must click this button




1.2 Add the certain IP address or website into Compatibility View Settings


- Choose Compatibility View Settings in Tool menu

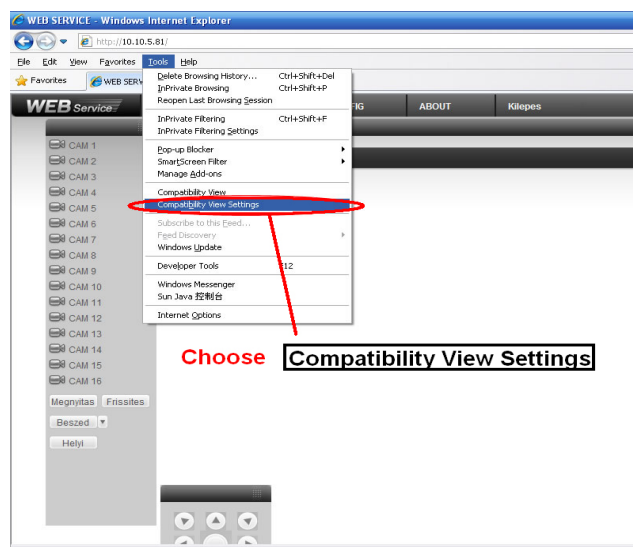

- Add the IP or domain name of device into Compatibility View Settings list

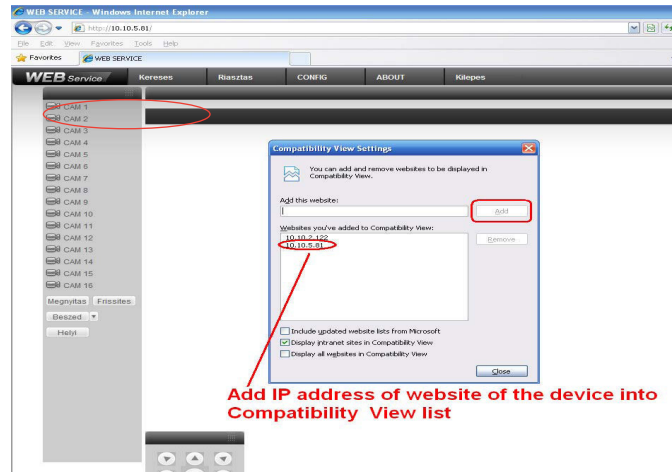



- Now the web interface can be accessed in normal mode.

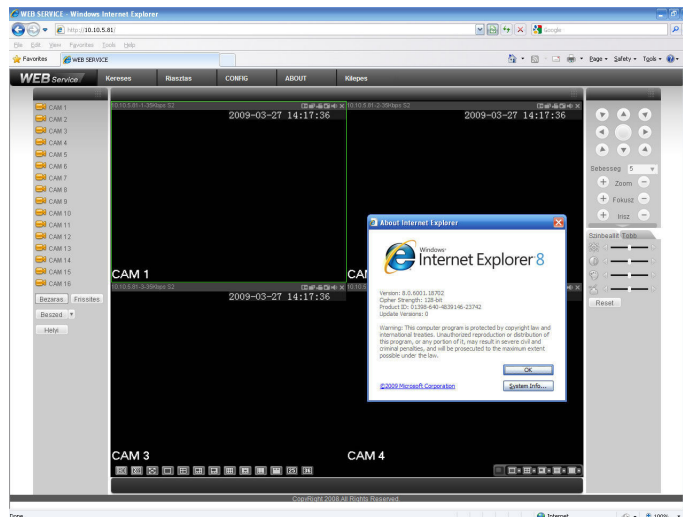


3- Download ActiveX with IE8

- For some PC when update windows and install IE8, it will not install the ActiveX.

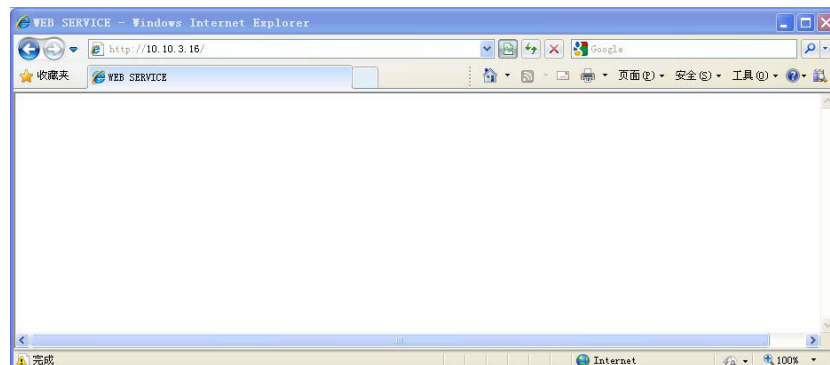

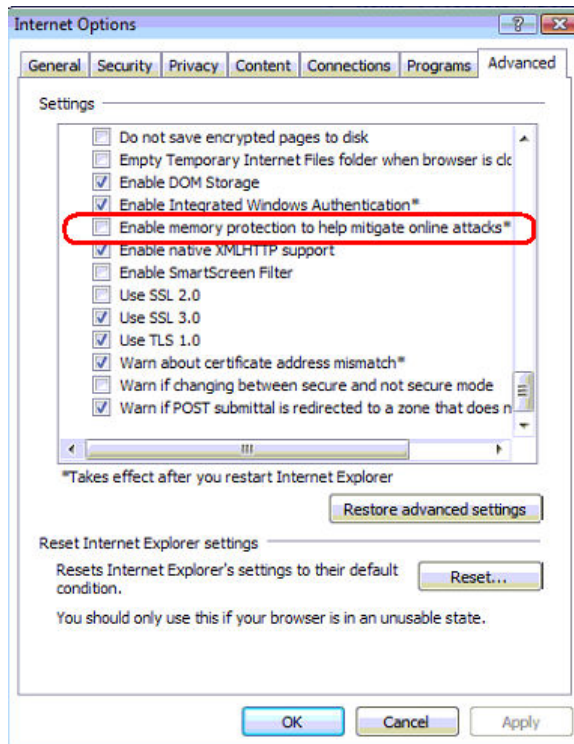

Note : If you have done the follows above and you still can not open the web normally, you need to check the setting in IE to enable downloading the ActiveX.

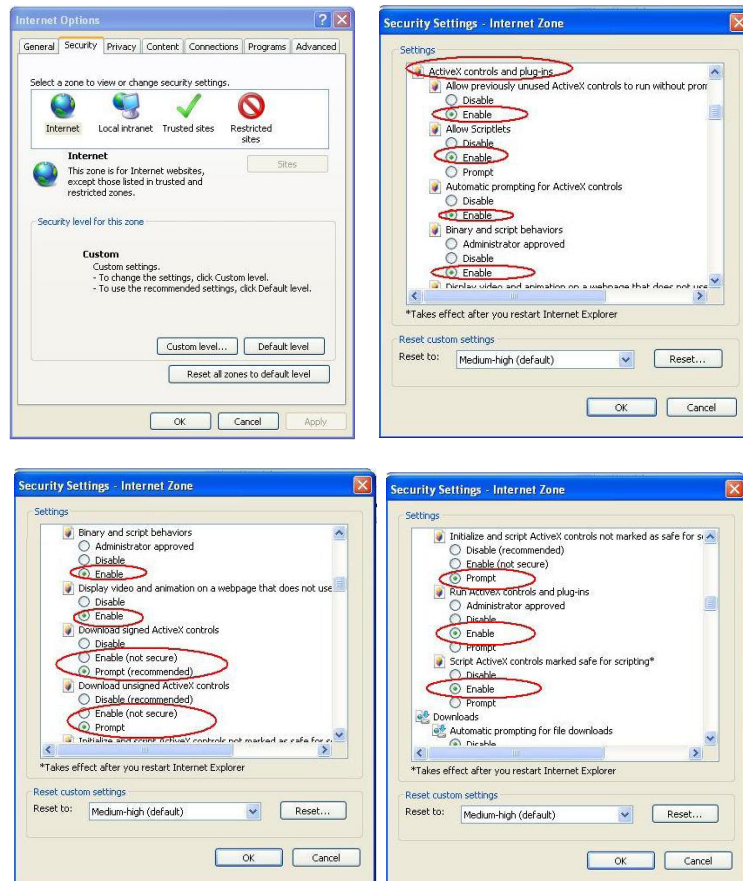

Annex 5: Email Function

First, the Email sender must support smtp

1- Email Setting 1

Set as follow, I use Email server: www.126.com as an example

	Désignation
①	Email server IP address (ping the server to get the IP)
②	Must be enable
③	Server port (usually 25)
④	User Name - Password
⑤	Sender. Must be your email address
⑥	Subject. You can set any subject according your needs
⑦	Receiver

```

C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [版本 5.1.2600]
(C) 版权所有 1985-2001 Microsoft Corp.

C:\Documents and Settings\wubing>ping smtp.126.com

Pinging smtp.126.split.netease.com [220.181.15.112] with 32 bytes of data:

Reply from 220.181.15.112: bytes=32 time=53ms TTL=52
Reply from 220.181.15.112: bytes=32 time=42ms TTL=52
Reply from 220.181.15.112: bytes=32 time=42ms TTL=52
Reply from 220.181.15.112: bytes=32 time=42ms TTL=52

Ping statistics for 220.181.15.112:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 42ms, Maximum = 53ms, Average = 44ms

C:\Documents and Settings\wubing>
  
```

- Ping the email server to get the ipaddress, for example: ping smtp.126.com to get ip:220.181.15.112
- Input user name and password of the account e.g.: Username: user. Password: pass
- Input sender: must the whole email address of the sender, for example: user@126.com
- Set Subject: any title according your need
- Input receiver email address

2- Email Setting 2

- Input domain name of the email server, such as:smtp.126.com, if you have already set DNS settings

Configuration window, EMAIL tab. Fields and callouts:

- 1: SMTP Server (smtp.126.com)
- 2: Enable checkbox
- 3: Port (25)
- 4: User Name (user)
- 5: Password (xxxx)
- 6: Subject (|)
- 7: Receiver 1

	Désignation
①	Email server: if it is domain name, set DNS as follow
②	Must be enable
③	Server port (usually 25)
④	User Name - Password
⑤	Sender. Must be your email address
⑥	Subject. Set any subject according your needs
⑦	Receiver

- DNS Setting

Configuration window, NETWORK tab. Fields and callouts:

- Preferred DNS: 202 . 101 . 172 . 35
- Alternate DNS: 202 . 101 . 172 . 35
- Callout: Get the DNS address from your network administrator

- Get DNS setting from your PC in the same network by command: ipconfig /all

```

C:\Documents and Settings\wubing>ipconfig /all

Windows IP Configuration

Host Name . . . . . : dell-c3769d3061
Primary Dns Suffix . . . . . :
Node Type . . . . . : Unknown
IP Routing Enabled. . . . . : No
WINS Proxy Enabled. . . . . : No


Ethernet adapter 本地连接:

Connection-specific DNS Suffix . :
Description . . . . . : Broadcom NetXtreme 57xx Gigabit Controller
Physical Address. . . . . : 00-1D-09-2F-4E-CC
Dhcp Enabled. . . . . : No
IP Address. . . . . : 10.10.2.144
Subnet Mask . . . . . : 255.255.0.0
Default Gateway . . . . . : 10.10.0.1
DNS Servers . . . . . : 202.101.172.35
                       221.12.1.228

C:\Documents and Settings\wubing>
  
```

3- Send Email Setting


- Enable "send email function" of Detect or Alarm settings, so when there are alarms the device will send Email.

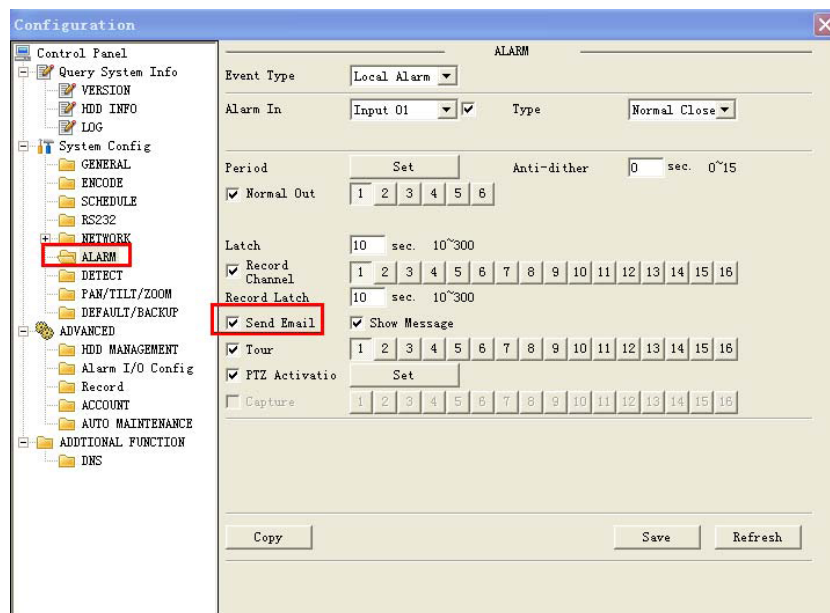

Annex 6: Routers configuration

If you need to access to your device from external network, you will need to set NAT settings on your router.

In the circumstance that your device is behind a router or gateway, you need to open the port on that router for the device behind it.

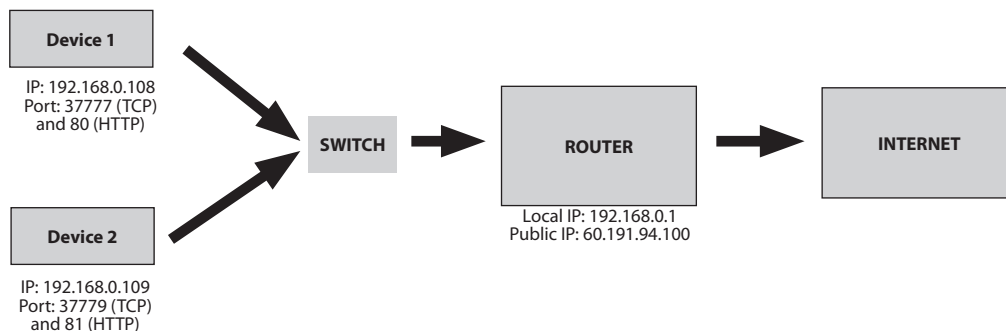

ROUTER NAT Settings			
IP Address	Private Port	Public Port	Enable/Disable
192.168.0.108	37777	37777	Enable
192.168.0.108	80	80	Enable
192.168.0.109	37779	37779	Enable
192.168.0.109	81	81	Enable


Local IP	HTTP Port	TCP Port	Public IP	HTTP Port	TCP Port
Device 1					
192.168.0.108	80	37777	60.191.94.100	80	37777
Device 2					
192.168.0.109	81	37779	60.191.94.100	81	37779


To access Device 1, input the IP address: <http://60.191.94.100>

To access Device 2, input the IP address: <http://60.191.94.100:81>

1- D-LINK Router (interface may very depending of the device)

Log on to the router. Select "Advanced" tab on the top, and click on "Virtual Server" button on the left. The following page will be displayed. The screen might be very different regarding to the different model of routers.

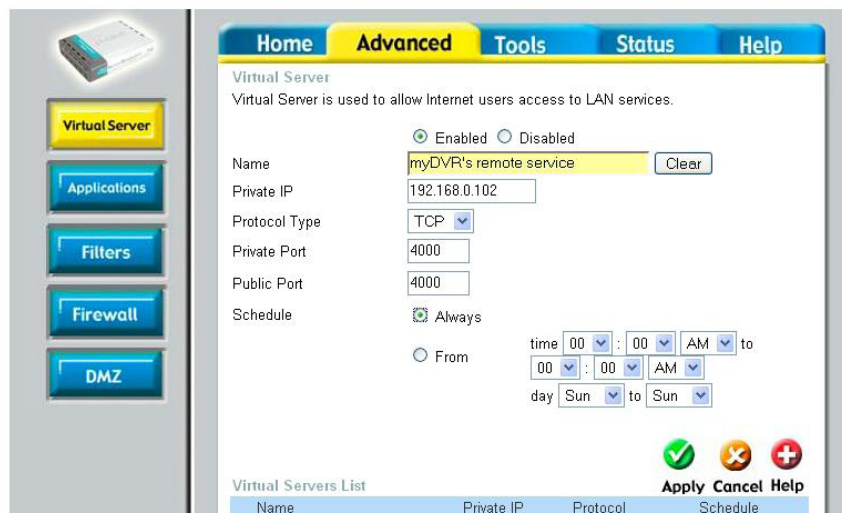

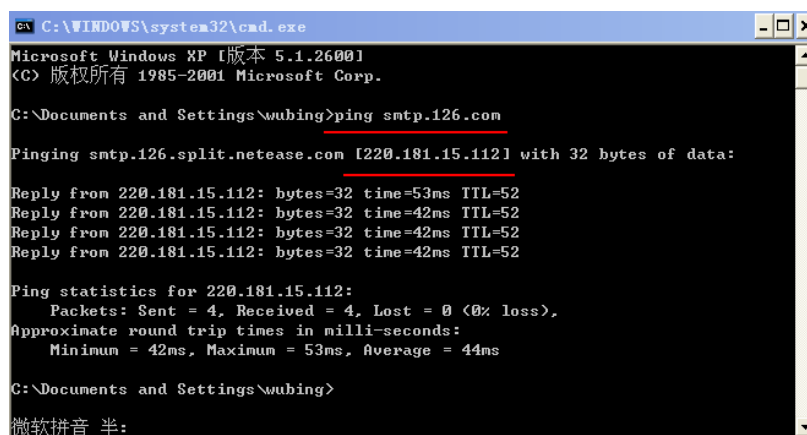

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [版本 5.1.2600]
(C) 版权所有 1985-2001 Microsoft Corp.

C:\Documents and Settings\wubing>ping smtp.126.com

Pinging smtp.126.split.netease.com [220.181.15.112] with 32 bytes of data:

Reply from 220.181.15.112: bytes=32 time=53ms TTL=52
Reply from 220.181.15.112: bytes=32 time=42ms TTL=52
Reply from 220.181.15.112: bytes=32 time=42ms TTL=52
Reply from 220.181.15.112: bytes=32 time=42ms TTL=52

Ping statistics for 220.181.15.112:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 42ms, Maximum = 53ms, Average = 44ms

C:\Documents and Settings\wubing>
```

Note :

Do not copy the information in this sample configuration. It is different according the setting on each device.

The picture above shows an example of how to open the service port on router for a device in local network.

- Check the "Enabled" button.

- In "Name" box, type in a name for this router's entry. For example: "myDVR's Remote Service"

- In "Private IP" box, type in the IP address of device which is the IP you put in "IP ADDRESS" field in "Network" setting menu on device. For example: "192.168.0.102".

- Select "TCP" in "Protocol Type" drop down menu.

- In both "Private Port" and "Public Port", type in the service port number. In above example, it is 4000. The port number is the port that you put in "TCP PORT" field in "NETWORK" menu on the device.

- Select "Always" button.

After click "Apply", the service port 4000 will be opened on the router for the device on 192.168.0.102.

The device Net View and other client tools will be able to connect to this device from public network by connecting to the router's IP address.

Follow the same process, add another entry for HTTP Port service. After this service port is open, the web browser client from public network will be able to connect to this device by connecting to the router's IP address.

2- LINK SYS Router

Log on to the router. Select “Applications & Gaming” tab on the top. Select “UPNP Forwarding” tab on the left. Then the following screen will be displayed. The screen might be very different regarding to the different model of routers.

Application	Ext. Port	TCP	UDP	Int. Port	IP Address	Enable
FTP	21	☒	☐	21	0	☐
Telnet	23	☒	☐	23	0	☐
SMTP	25	☒	☐	25	0	☐
DNS	53	☐	☒	53	0	☐
TFTP	69	☐	☒	69	0	☐
FTPS	79	☒	☐	79	0	☐
HTTP	80	☒	☐	80	0	☐
POP3	110	☒	☐	110	0	☐
NNTP	119	☒	☐	119	0	☐
SNMP	161	☐	☒	161	0	☐
	0	☐	☐	0	0	☐
	0	☐	☐	0	0	☐
	0	☐	☐	0	0	☐
	0	☐	☐	0	0	☐
	0	☐	☐	0	0	☐

You can add entry on the first available row in the list table.

- In the “Application” box, type in the entry name you want to use. For example: MyDVR’s Service, for the service port we are opening for DVR’s remote service.

- In the “Ext Port” box, type in the service port you put in the DVR’s network setting. For example: 4000.

- Select “TCP” button.

- In “Int Port” box, type in the same port number you put in “Ext. Port” box. For example: 4000.

- In “IP Addr.” box, type in the last decimal digit of your DVR’s IP address. For example, the device’s IP address is 192.168.0.102, so type in 102 in this box.

- Check the “Enable” box to enable port forwarding.

Follow the same process, add another entry, open the HTTP Port on the router for this device.

Click the “Save Setting” button, the router might need to restart. After the these settings have been activated, the web browser client, device Net View client or other client tools will be able to access the device from public network.

3 SMC Router

Log on to the router, select “Advanced Setup” tab on the top, and click “NAT” button on the left panel. Select “Virtual Server” in the expanded list structure, you will see the following screen. Notice that it might look very different according to different models of routers.

	Private IP	Private Port	Type	Public Port
1.	192.168.2		☒ TCP ☐ UDP	
2.	192.168.2		☒ TCP ☐ UDP	
3.	192.168.2		☒ TCP ☐ UDP	
4.	192.168.2		☒ TCP ☐ UDP	
5.	192.168.2		☒ TCP ☐ UDP	

- In “Private IP” column, put in the last decimal digit of your DVR’s IP address. For example, your device’s IP address is 192.168.2.102, so put 102 in this box.

- In “Private Port” column, put in the service port number you put in the DVR network settings. For example: 4000.

- In “Type” column, select the “TCP” radio button.

- In “Public Port” column, put in the same service port number you put in the “Private Port” box, for example, 4000.

Follow the same process, add another entry for HTTP Port on the router.

Click “Apply” button and confirm if it prompts to restart the router. After the new configuration is activated, the web browser clients or other DVR clients tools from public network will be able to access the device.